


JDP-10BM Assembly Breakdown

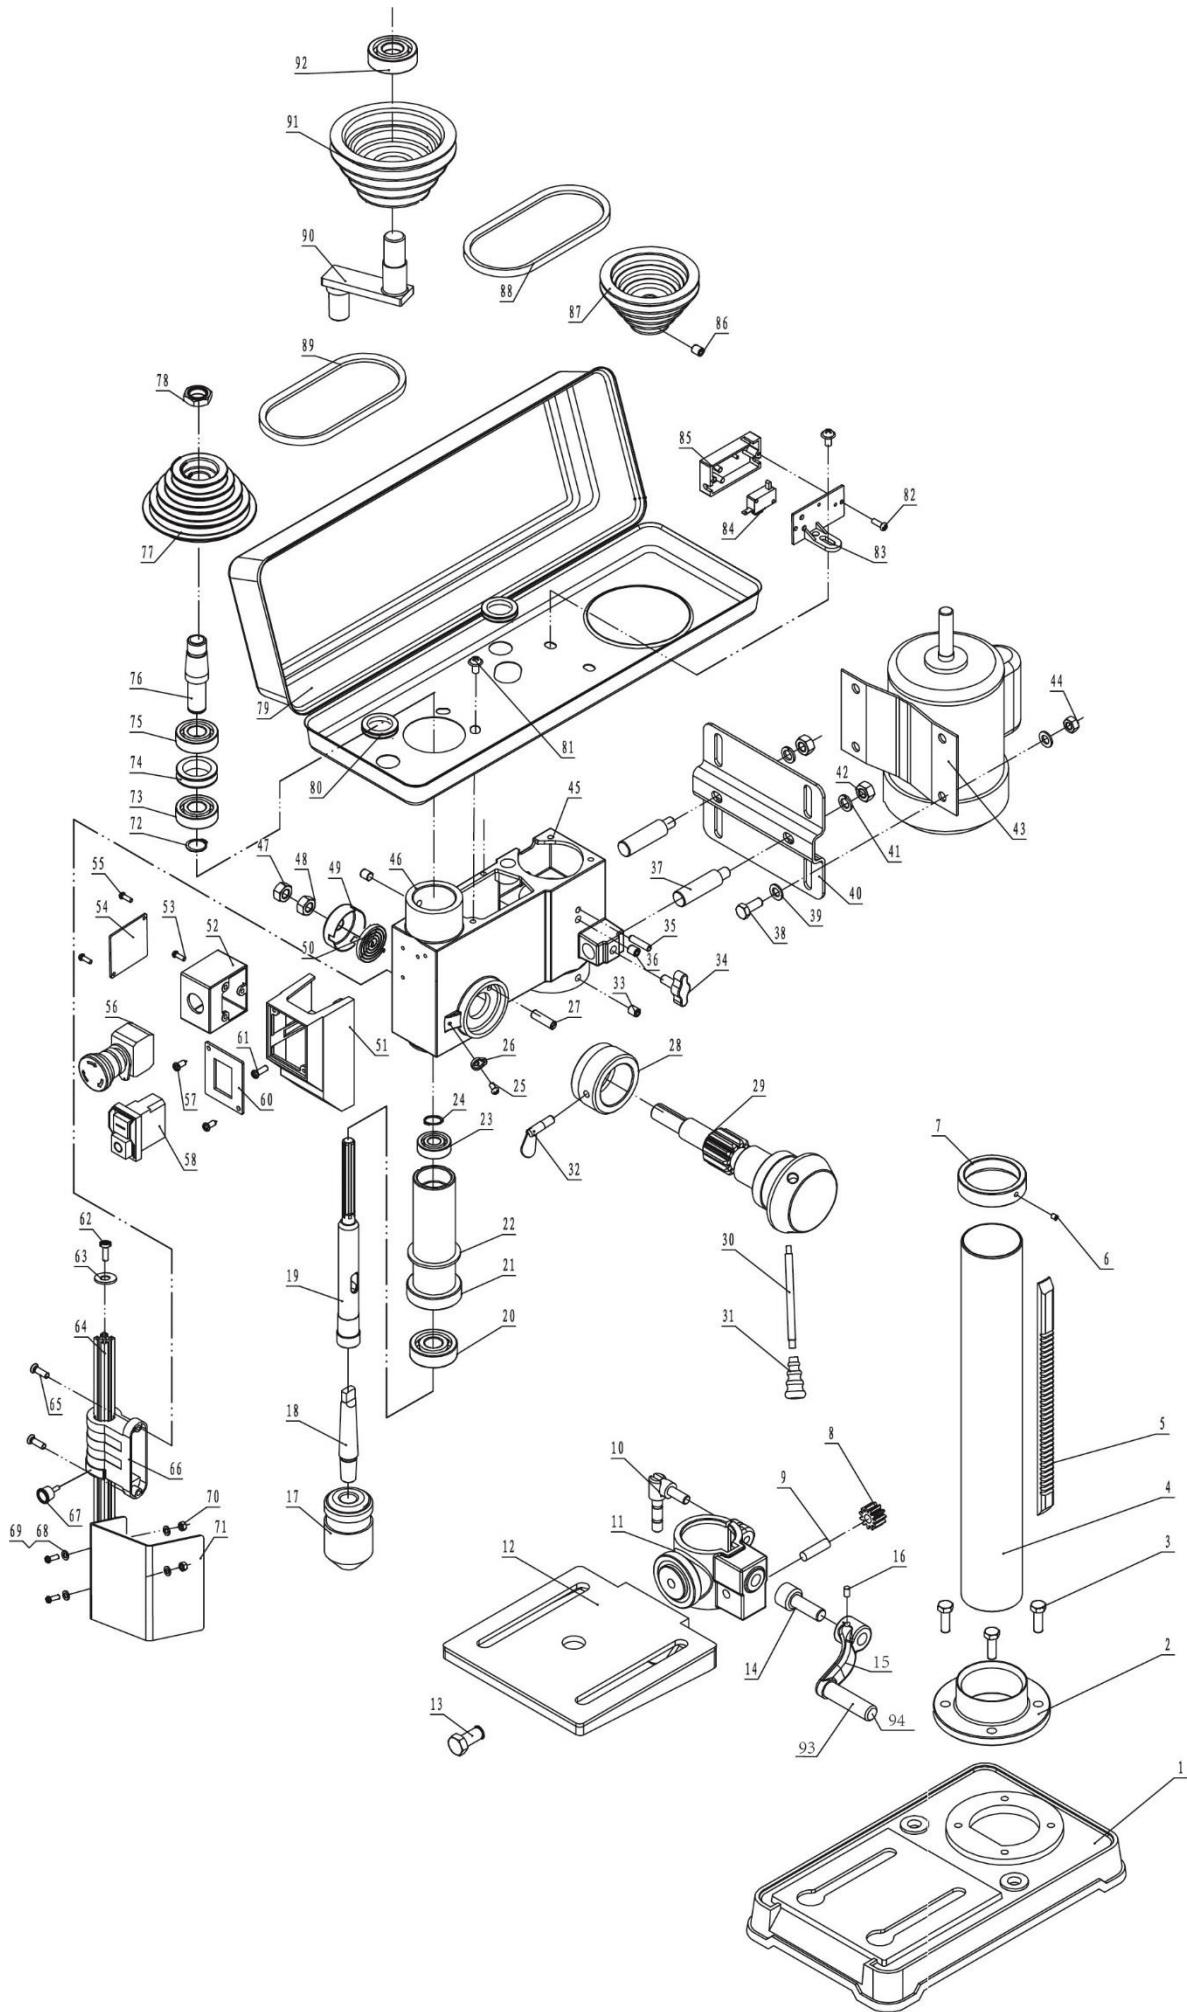

JDP-10BM Parts List for Breakdown (1/2)

Index	Part No.	Description	Size	Qty.
1	JDP10BM-001	Base		1
2	JDP10BM-002	Column support		1
3	JDP10BM-003	Hex Cap Screw.....	M8×20.....	4
4	JDP10BM-004	Column		1
5	JDP10BM-005	Rack		1
6	JDP10BM-006	Hex Socket Cap Screw	M6×10	1
7	JDP10BM-007	Rack Collar.....		1
8	JDP10BM-008	Helical Gear		1
9	JDP10BM-009	Gear Pin.....		1
10	JDP10BM-010	Column Lock Handle		1
11	JDP10BM-011	Table Support.....		1
12	JDP10BM-012	Table		1
13	JDP10BM-013	Hex Cap Screw.....	M12×25	1
14	JDP10BM-014	Worm Shaft		1
15	JDP10BM-015	Crank Arm Shaft		1
16	JDP10BM-016	Hex Socket Cap Screw	M6×10	1
17	JDP10BM-017	Chuck.....		1
18	JDP10BM-018	Arbor		1
19	JDP10BM-019	Spindle		1
20	BB-6204ZZ	Ball Bearing	6204ZZ.....	1
21	JDP10BM-021	Quill		1
22	JDP10BM-022	Rubber Washer		1
23	BB-6201ZZ	Ball Bearing	6201ZZ.....	1
24	JDP10BM-024	C-Clip		1
25	JDP10BM-025	Cross Pan Head Screw	M4×8	1
26	JDP10BM-026	Indicator		1
27	JDP10BM-027	Stop Screw		1
28	JDP10BM-028	Ring Depth Stop		1
29	JDP10BM-029	Pinion Shaft / Hub		1
30	JDP10BM-030	Handle		1
31	JDP10BM-031	Grip		1
32	JDP10BM-032	locking button		1
33	JDP10BM-033	Hex Socket Cap Screw	M8×8	3
34	JDP10BM-034	Locking Button		1
35	JDP10BM-035	Pin	6×16	1
36	JDP10BM-036	Hex Socket Cap Screw	M8×8	1
37	JDP10BM-037	Motor Rod		2
38	JDP10BM-038	Hex Cap Screw	M8×20	4
39	JDP10BM-039	Washer	8	8
40	JDP10BM-040	Motor Base		1
41	JDP10BM-041	Lock washer	10	8
42	JDP10BM-042	Nut	M10	2
43	JDP10BM-043	Motor		1
44	JDP10BM-044	Nut	M8	4
45	JDP10BM-045	Head		1
46	JDP10BM-046	Hex Socket Cap Screw	M8×8	1
47	JDP10BM-047	Nut		1
48	JDP10BM-048	Nut		1
49	JDP10BM-049	Spring Cap		1
50	JDP10BM-050	Coil Spring		1
51	JDP10BM-051	Switch Box		1
52	JDP10BM-052	Emergency stop switch box		1
53	JDP10BM-053	Cross Pan Head Screw	M4×12	3
54	JDP10BM-054	E-Stop Switch Box Cover		1
55	JDP10BM-055	Tapping Screw	M3.5×13	2
56	JDP10BM-056	Emergency Stop Switch		1

JDP-10BM Parts List for Breakdown (2/2)

Index No.	Part No.	Description	Size	Qty.
57	JDP10BM-057	Tapping Screw	M4.2×9	2
58	JDP10BM-058	Electromagnetic Switch.....		1
60	JDP10BM-060	Switch Plate.....		1
61	JDP10BM-061	Cross Pan Head Screw.....	M5×12	4
62	JDP10BM-062	Hex Socket Cap Screw	M6×8	1
63	JDP10BM-063	Washer	6	3
64	JDP10BM-064	Chuck Guard Rod		1
65	JDP10BM-065	Cross Pan Head Screw.....	M5×16	2
66	JDP10BM-066	Chuck Guard Micro Switch Assy.....		2
67	JDP10BM-067	Shifter Bolt		1
68	JDP10BM-068	Washer	5	4
69	JDP10BM-069	Cross Pan Head Screw.....	M5×40	2
70	JDP10BM-070	Nut	M5	2
71	JDP10BM-071	Chuck Guard		1
72	JDP10BM-072	C-Clip	17	1
73	BB-6203ZZ	Ball Bearing	6203ZZ	1
74	JDP10BM-074	Spacer		1
75	BB-6203ZZ	Ball Bearing	6203ZZ	1
76	JDP10BM-076	Insert Pulley		1
77	JDP10BM-077	Spindle Pulley.....		1
78	JDP10BM-078	Pulley Set nut		1
79	JDP10BM-079	Pulley Cover Assy		2
80	JDP10BM-080	Strain Relief.....		2
81	JDP10BM-081	Pan Head Screw	M6×12	4
82	JDP10BM-082	Tapping Screw	M3.5×13	2
83	JDP10BM-083	Micro Switch Box Cover		1
84	JDP10BM-084	Micro Switch		1
85	JDP10BM-085	Micro Switch Box		1
86	JDP10BM-086	Hex Socket Cap Screw	M6×10	1
87	JDP10BM-087	Motor Pulley		1
88	JDP10BM-088	V-Belt	M-20	1
89	JDP10BM-089	V-Belt	M-20	1
90	JDP10BM-090	Center Pulley Shaft.....		1
91	JDP10BM-091	Center Pulley.....		1
92	JDP10BM-092	Ball Bearing	6203ZZ	1
93	JDP10BM-093	Crank Arm Handle Grip		1
94	JDP10BM-094	Crank Arm Handle Shaft.....		1
	JDP10BM-095	Scale Indicator (Not show)		1
	JDP10BM-096	Rivet (Not show).....	2.5×5	5
	JDP10BM-097	Tilt Scale (Not show).....		1
	JDP10BM-098	Depth Scale (Not show).....		1
	JDP10BM-099	Rubber sleeve (Not show)		1
	JDP10BM-100	Rubber sleeve (Not show)		1