

JET

JSS-16 SCROLL SAW

**10000808M/U
230/50-60/1**


PARTS LIST

Walter Meier (Tool) AG
Tämperlistrasse 5
CH-8117 Fällanden
Switzerland
Phone +41 44 806 47 48
Fax +41 44 806 47 58
jetinfo.eu@waltermeier.com
www.jettools.com

CE

P-10000808M/U 2010/08/20

Parts Breakdown For JSS-16 Scroll Saw

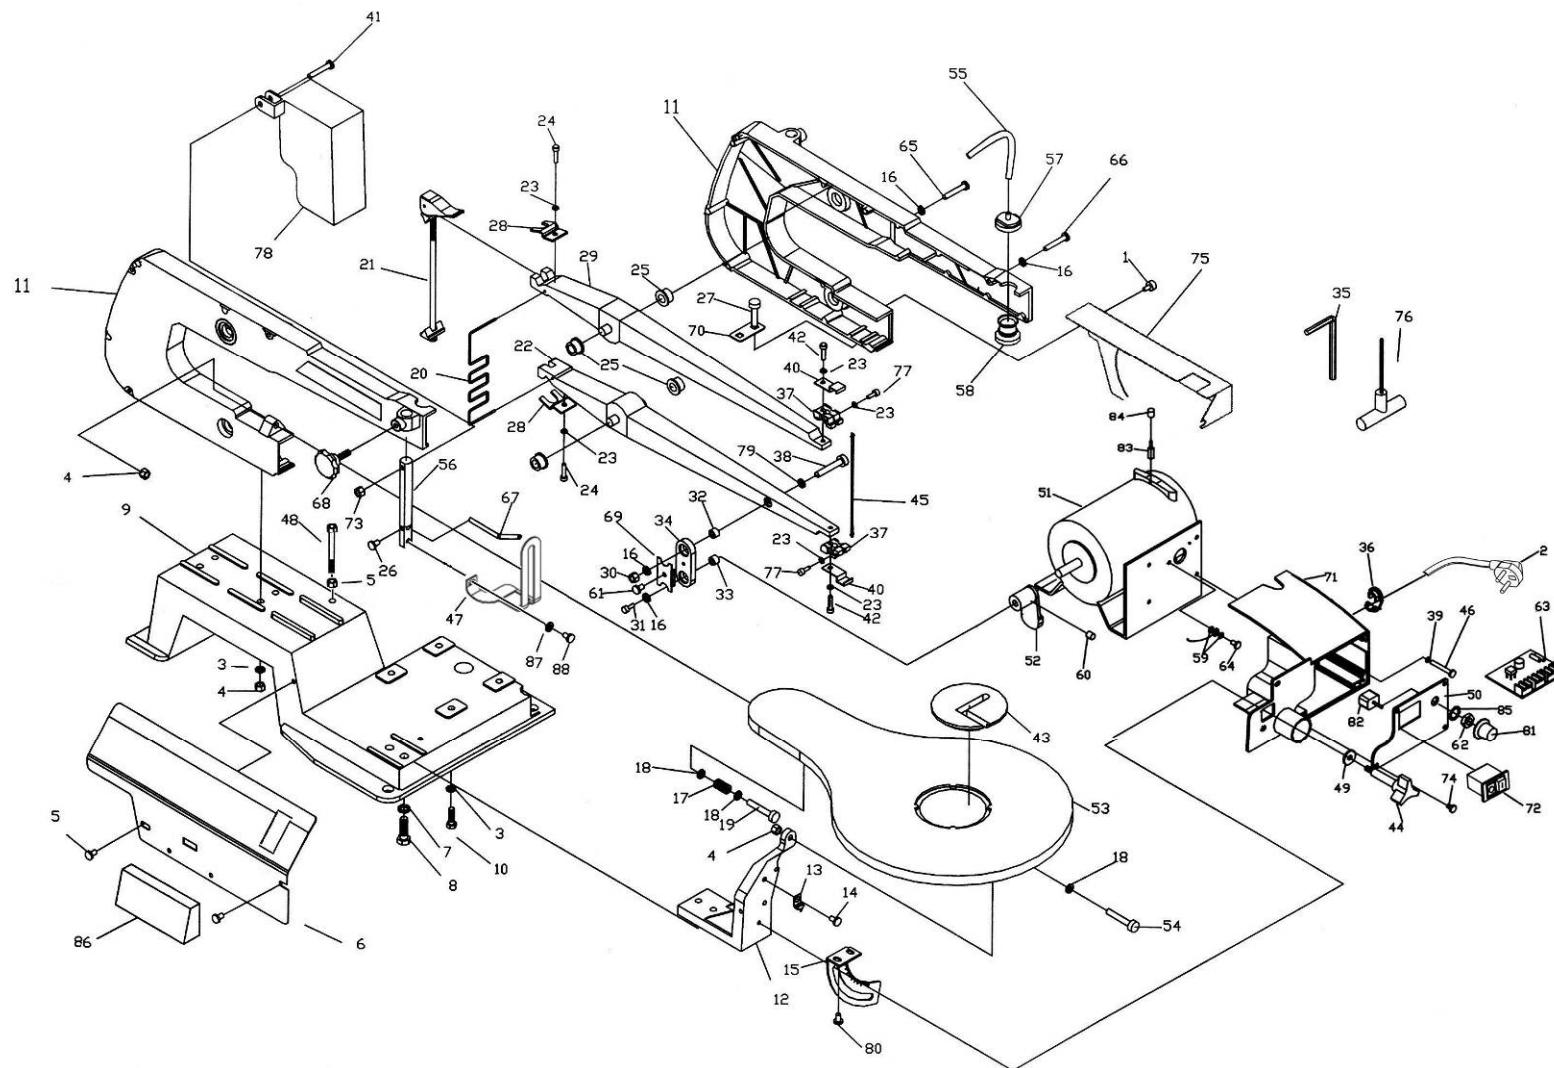

Parts List For JSS-16 Scroll Saw

Index . Part No.....No.	Description.....	Size.....	Qty.
1.....JSS16-001	PAN HEAD SCREW ST4.2X10		1
2.....JSS16-002	POWER SUPPLY 230V.....		1
.....JSS16-002U	POWER SUPPLY 230V-UK.....		1
3.....JSS16-003	SPRING WASHER 6.....		4
4.....JSS16-004	HEX NUT M6		1
5.....JSS16-005	HEX SCREW M5 X10.....		2
6.....JSS16-006	PLATE COVER.....		1
7.....JSS16-007	SPRING WASHER 8.....		4
8.....JSS16-008	HEX HEAD SCREW M8X25		4
9.....JSS16-009	BASE	1	
10.....JSS16-010	HEX HEAD SCREW M6X20.....		4
11.....JSS16-011	HOUSING SET		1
12.....JSS16-012	SUPPORT TABLE		1
13.....JSS16-013	INDICATOR.....		1
14.....JSS16-014	PAN HEAD SCREW M6X12		1
15.....JSS16-015	BRACKET TILT		1
16.....JSS16-016	SPRING WASHER 5.....		2
17.....JSS16-017	SPRING.....		1
18.....JSS16-018	FLAT WASHER 6.....		2
19.....JSS16-019	HEX HEAD BOLT M6X40.....		1
20.....JSS16-020	SPRING.....		1
21.....JSS16-021	BOLT TENSION		1
22.....JSS16-022	LOWER ROCKER ARM ASSY.....		1
23.....JSS16-023	SPRING WASHER 4.....		2
24.....JSS16-024	HEX HEAD BOLT M4X10.....		2
25.....JSS16-025	BEARING FLANGE		4
26.....JSS16-026	PAN HEAD SCREW M5X6		2
27.....JSS16-027	ROUND HEAD SCREW M6X25.....		2
28.....JSS16-028	RETAINER		2
29.....JSS16-029	UPPER ROCKER ARM ASSY		1
30.....JSS16-030	HEX NUT M5		2
31.....JSS16-031	HEX HEAD BOLT M5X20.....		2
32.....JSS16-032	SPACER BEARING		1
33.....JSS16-033	SPACER BEARING		1
34.....JSS16-034	LINK ASSEMBLY.....		1
35.....JSS16-035	ALLEN WRENCH		1
36.....JSS16-036	CORD CLAMP.....		1
37.....JSS16-037	BLADE HOLDER		2
38.....JSS16-038	HEX HEAD BOLT M5X25.....		2
39.....JSS16-039	FLAT WASHER 4.....		2
40.....JSS16-040	PLATE CHIP.....		2
41.....JSS16-041	PAN HEAD SCREW M5X25.....		2
42.....JSS16-042	HEX HEAD BOLT M4X16.....		2
43.....JSS16-043	TABLE INSERT		1
44.....JSS16-044	KNOB		1
45.....JSS16-045	BLADE		1
46.....JSS16-046	PAN HEAD SCREW M4X16.....		4
47.....JSS16-047	DROP FOOT		1
48.....JSS16-048	SCREW		2
49.....JSS16-049	BIG FLAT WASHER 6.....		2
50.....JSS16-050	SWITCH COVER		1
51.....JSS16-051	MOTOR 230V		1
52.....JSS16-052	ECCENTRIC.....		1
53.....JSS16-053	TABLE		1
54.....JSS16-054	HEX HEAD BOLT M6X35.....		2
55.....JSS16-055	PVC PIPE		1
56.....JSS16-056	SUPPORT ROD		1

Parts List For JSS-16 Scroll Saw

Index . Part No.....No.	Description.....	Size.....	Qty.
57.....JSS16-057	BELLOWS LOCKS		1
58.....JSS16-058	BELLOWS		1
59.....JSS16-059	TOOTH WASHER 4		4
60.....JSS16-060	SET SCREW M8X8.....		1
61.....JSS16-061	PAN HEAD SCREW ST4.2X8		1
62.....JSS16-062	THIN NUT M10.....		1
63.....JSS16-063	PRINTED CIRCUIT BOARD 230V.....		1
64.....JSS16-064	PAN HEAD SCREW M4X6.....		2
65.....JSS16-065	PAN HEAD SCREW M5X35.....		2
66.....JSS16-066	PAN HEAD SCREW M5X30.....		2
67.....JSS16-067	BLOWER TUBE.....		1
68.....JSS16-068	KNOB	1	
69.....JSS16-069	BEARING FENCE.....		1
70.....JSS16-070	SET PLATE		1
71.....JSS16-071	SWITCH CASE.....		1
72.....JSS16-072	POWER SWITCH 230V.....		1
73.....JSS16-073	HEX NUT M5		2
74.....JSS16-074	PAN HEAD SCREW ST4.2X13		4
75.....JSS16-075	BACK PLATE COVER		1
76.....JSS16-076	ALLEN WRENCH 3MM.....		1
77.....JSS16-077	HEX HEAD SCREW M4X16.....		2
78.....JSS16-078	BLADE GARD.....		1
79.....JSS16-079	FLAT WASHER 5MM.....		2
80.....JSS16-080	PAN HEAD SCREW M5X8.....		2
81.....JSS16-081	SPEED KNOB		1
82.....JSS16-082	RESISTOR		1
83.....JSS16-083	BRUSH.....		2
84.....JSS16-084	BRUSH CAP.....		2
85.....JSS16-085	STAR WASHER M10.....		1
86.....JSS16-086	BLADE BOX		1
89.....JSS16-089	DROP FOOT ASSEMBLY• 47 87 88•		1
87.....JSS16-087	WASHER 5.....		1
88.....JSS16-088	HEX HEAD SCREW M5X10		1