



JSG-18

Disc & Belt Sander

JR130 1 ~230V 50Hz


PARTS LIST



Импортер в РФ: ООО «ИТА Технолоджи»
105082, Москва, Переведеновский пер., д. 17
www.jettools.ru
Made in PRC / Сделано в КНР

P-JR123 2026-09

Parts Breakdown for JSG-18 Disc & Belt Sander

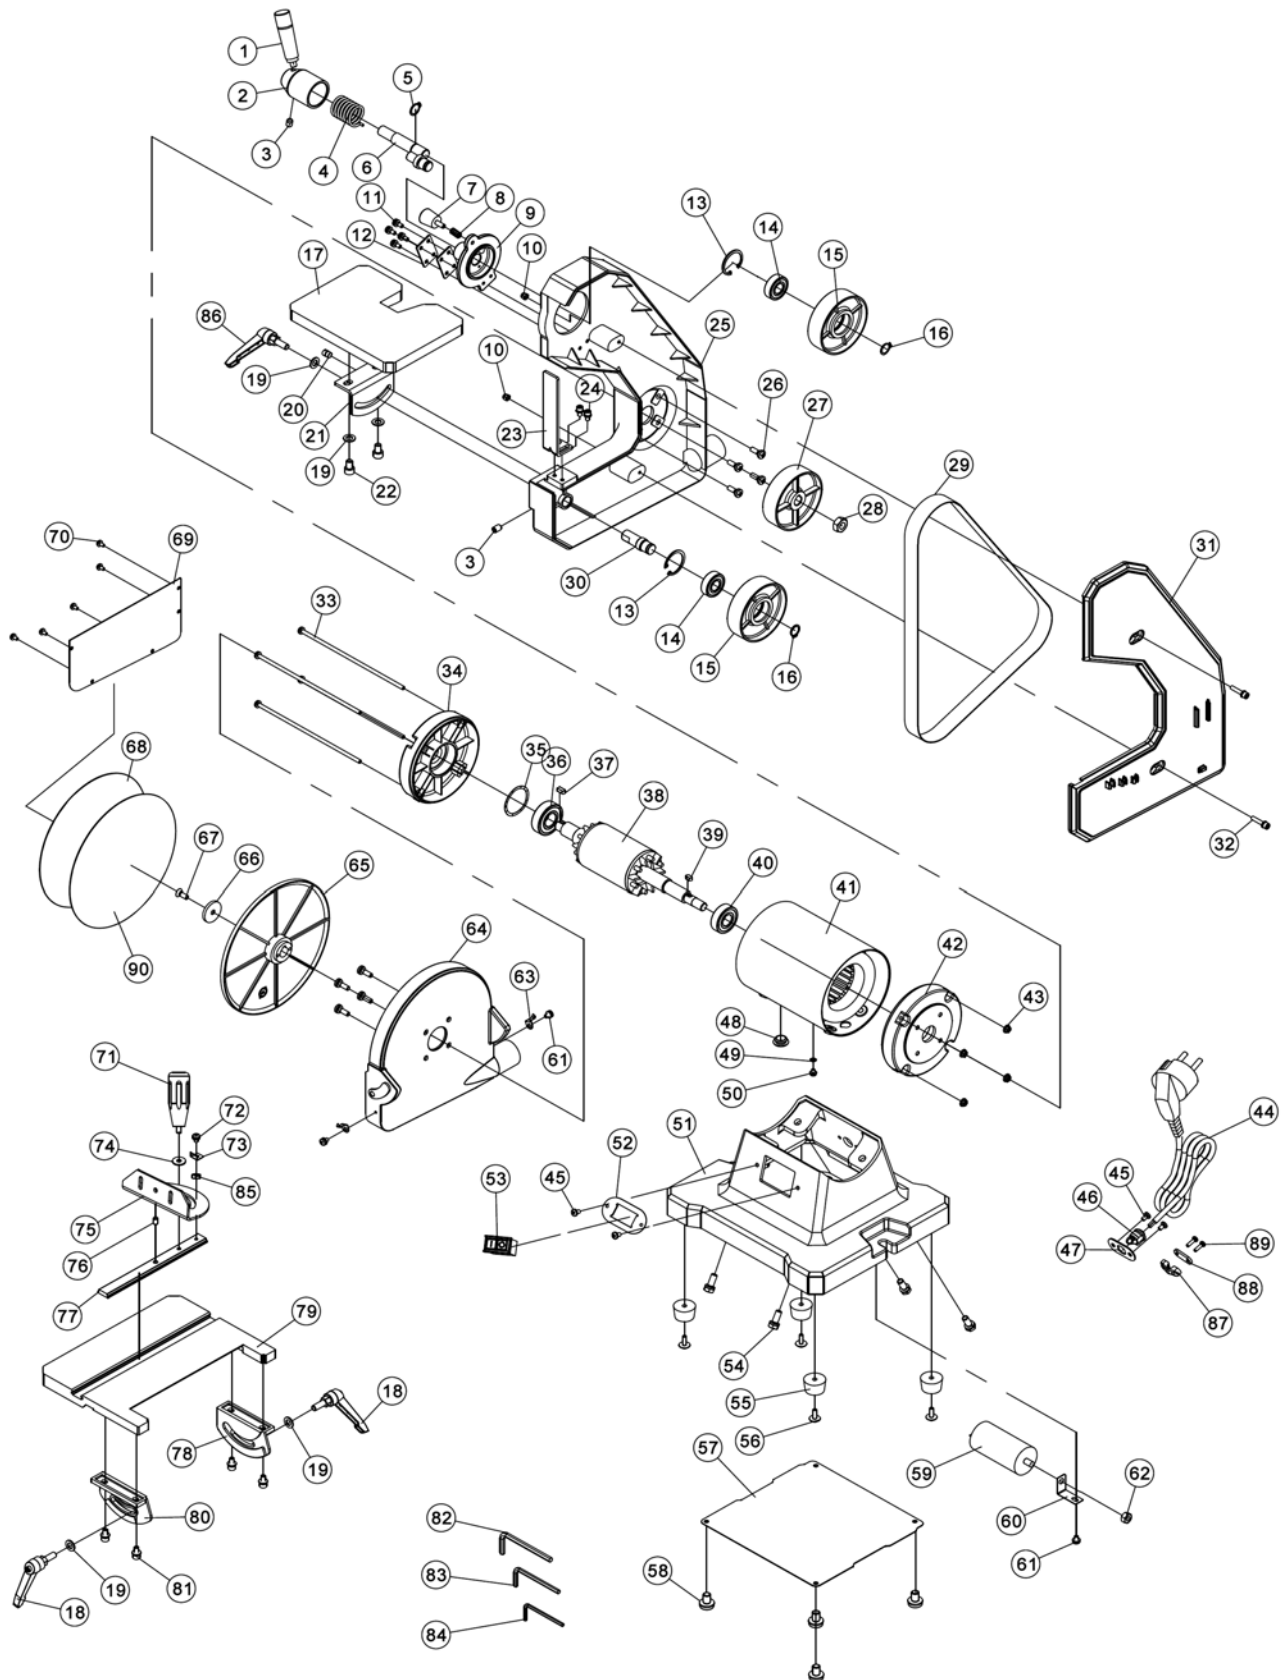

Parts List for JSG-18 Disc & Belt Sander

Index No.	Part No.	Description	Size	Qty
1	JSG18-001	Belt Tension Handle		1
2	JSG18-002	Tension Handle Bracket		1
3	GB79	Socket Set Screw	M8x12	2
4	JSG18-004	Belt Tension Spring		1
5	JSG18-005	Circlip for Shaft	16mm	1
6	JSG18-006	Driven Eccentric Shaft Assembly		1
7	JSG18-007	Small Knob		1
8	JSG18-008	Cabinet Handle Spring		1
9	JSG18-009	Belt Driven Support Base		1
10	GB889.1	Lock Nut with Non	M5	2
11	GB818	Pan Head Cap Screw + Washer	M5x12	4
12	JSG18-012	Belt Adjusting Plate		2
13	JSG18-013	Circlip for Bore - 35	35mm	2
14	GB276	Ball Bearing	6202-2RS	2
15	JSG18-015	Driven Pulley		2
16	JSG18-016	Circlip for Shaft	15mm	2
17	JSG18-017	Belt Worktable		1
18	JSG18-018	Locking Handle Assembly		3
19	GB96	Flat Washer	8mm	5
20	JSG18-020	Set Screw		1
21	JSG18-021	Belt Worktable Bracket		1
22	GB70.1	Socket Cap Head Screw	M8x12	2
23	JSG18-023	Belt Limit Plate		1
24	GB70.1	Socket Cap Head Screw +vWasher	M5x10	2
25	JSG18-025	Belt Guard Bottom Plate		1
26	GB818	Pan Head Screw with Spring Washer	M6x18	8
27	JSG18-027	Drive Pulley		1
28	GB/T276	Hex Nut	M12	1
29	JR142 (JSG18-029)	Sanding Belt	80G	1
30	JSG18-030	Driven Shaft		1
31	JSG18-031	Belt Guard Cover Plate		1
32	GB70.1	Socket Cap Head Screw + Washer	M5x25	2
33	GB818	Pan Head Screw with Plain Washer	M5x196	4
34	JSG18-034	Left End Cover		1
35	JSG18-035	Wave Spring	47 mm	1
36	GB276	Ball Bearing	6204-2RS	1
37	JSG18-037	Parallel Key	5x5x12	1
38	JSG18-038	Rotor		1
39	JSG18-039	Parallel Key	5x5x10	1
40	GB276	Ball Bearing	6203-2RS	1
41	JSG18-041	Stator		1
42	JSG18-042	Right End Cover		1
43	JSG18-043	Hexagon Flange Nut	M5	4
44	JSG18-044	Power Cord with Plug		1
45	GB818	Pan Head Cap Screw	M5x8	4
46	JSG18-046	Cable Clip - 6P4		1
47	JSG18-047	Cable Clip Base		1
48	JSG18-048	Cable Gland		1
49	GB818	External Tooth Lock Washer - 4	4mm	1
50	GB818	Pan Head Cap Screw +Washer	M4x7	1
51	JSG18-051	Base		1
52	JSG18-052	Switch Base Plate		1
53	JSG18-053	Electromagnetic Switch	KJD20-2	1
54	GB5781	Hex Cap Screw	M8x20	4

Parts List for JSG-18 Disc & Belt Sander

Index No.	Part No.	Description	Size	Q'ty
55	JSG18-055	Rubber Foot		4
56	GB818	Pan Head Cap Screw + Washer	M5x16	4
57	JSG18-057	Base Bottom Plate		1
58	GB818	Pan Head Cap Screw + Washer	M5x8	4
59	JSG18-059	VDE Capacitor with Terminal Stud		1
60	JSG18-060	Capacitor Bracket		1
61	GB818	Pan Head Cap Screw + Washer	M5x8	3
62	GB6170	Hex Nut	M8	1
63	JSG18-063	Pointer		2
64	JSG18-064	Disc Sander Guard		1
65	JSG18-065	Sanding Disc Plate		1
66	JSG18-066	Sanding Disc Pad		1
67	GB819.1	Flat Head Cap Screw	M6x16	1
68	JR138 (JSG18-068)	Sanding Disc	80G	1
69	JSG18-069	Disc Sander Guard Plate		1
70	GB818	Pan Head Cap Screw + Washer	M4x8	5
71	JSG18-071	Index Plate Handle		1
72	GB818	Pan Head Cap Screw + Washer	M5x12	1
73	JSG18-073	Pointer		1
74	GB96	Flat Washer	6mm	1
75	JSG18-075	Index Plate		1
76	JSG18-076	Threaded Cylindrical Pin		1
77	JSG18-077	Miter Rod		1
78	JSG18-078	Left Support of Disc Sander Worktable		1
79	JSG18-079	Disc Sander Worktable		1
80	JSG18-080	Right Support of Disc Sander Worktable		1
81	GB70.1	Socket Cap Head Screw +Wahser	M6x12	4
82	JSG18-082	Hex Key Wrench - 6	6	1
83	JSG18-083	Hex Key Wrench - 5	5	1
84	JSG18-084	Hex Key Wrench - 4	4	1
85	GB6170	Hex Nut	M6	1
86	JSG18-086	Belt Worktable Locking Handle		1
87	JSG18-087	Cable Press Plate		1
88	JSG18-088	Cable Press Plate Gasket		1
89	GB818	Pan Head Cap Screw	M4x16	2
90	JR141	Velcro base disc 203mm		1
	JSG18-WL	JET Warning Label (Not shown)		1
	JSG18-ID	JET ID Label (Not shown)		1
	JSG18-ML	JET Motor Label (Not shown)		1
	JET-LOGO	JET Logo with Adhesive (Not shown)		1
	JET Model Logo	JET Model Logo with Adhesive		1

Wiring Diagram for JSG-18 Disc & Belt Sander

JR123..... ~ 230V, 50Hz

