



JTS-1600XL

Sliding Table Saw

JR 44~230V, 50Hz
JR1003~400V, 50Hz

PARTS LIST




Импортер в РФ: ООО «ИТА Технолоджи»
105082, Москва, Переведеновский пер., д. 17
www.jettools.ru
Made in PRC / Сделано в КНР


P-JR044, JR100

2026-06


Parts Breakdown for JTS-1600XL Sliding Table Saw --A

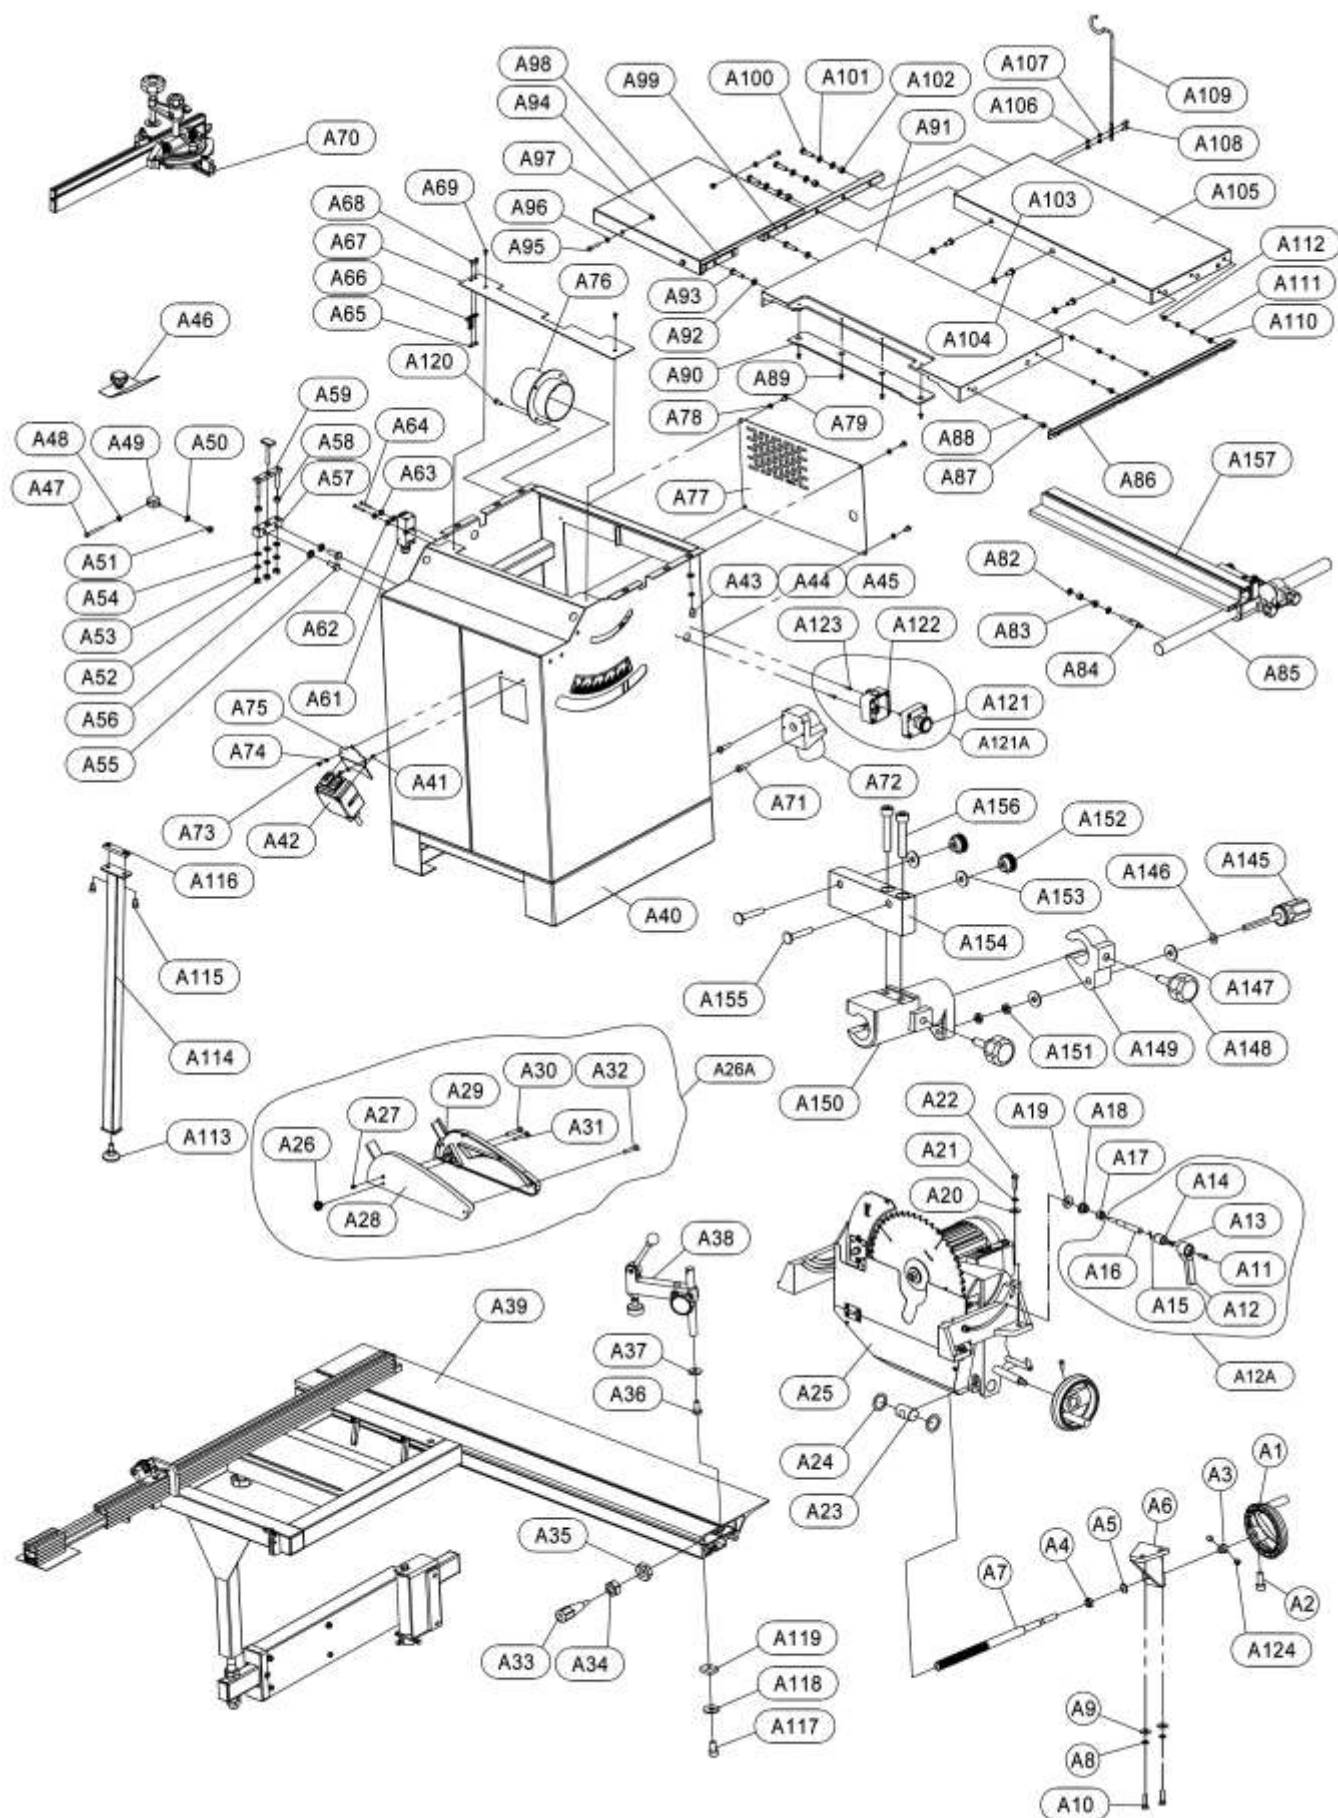

Parts Breakdown for JTS-1600XL Sliding Table Saw—B

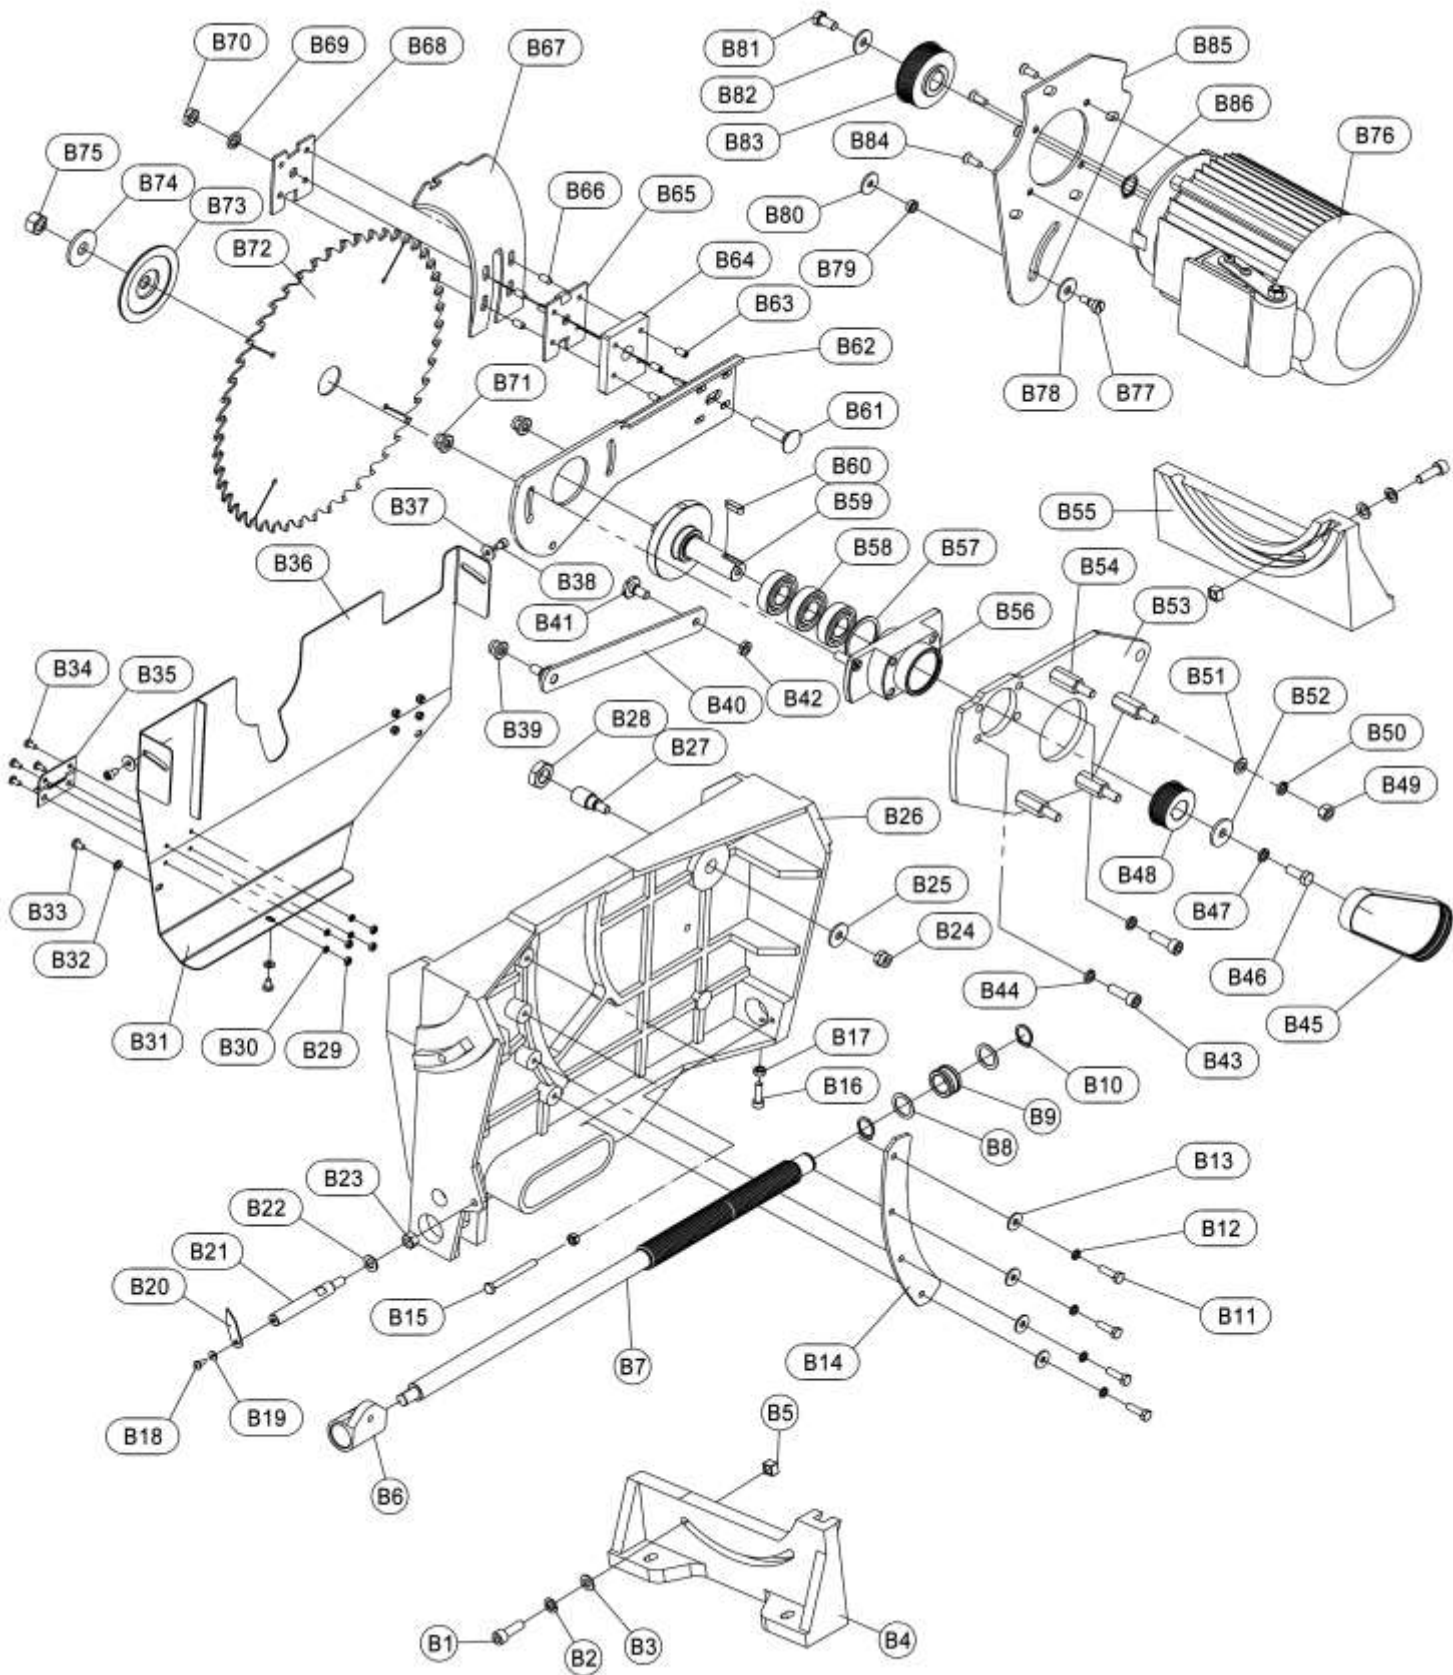

Parts Breakdown for JTS-1600XL Sliding Table Saw—C

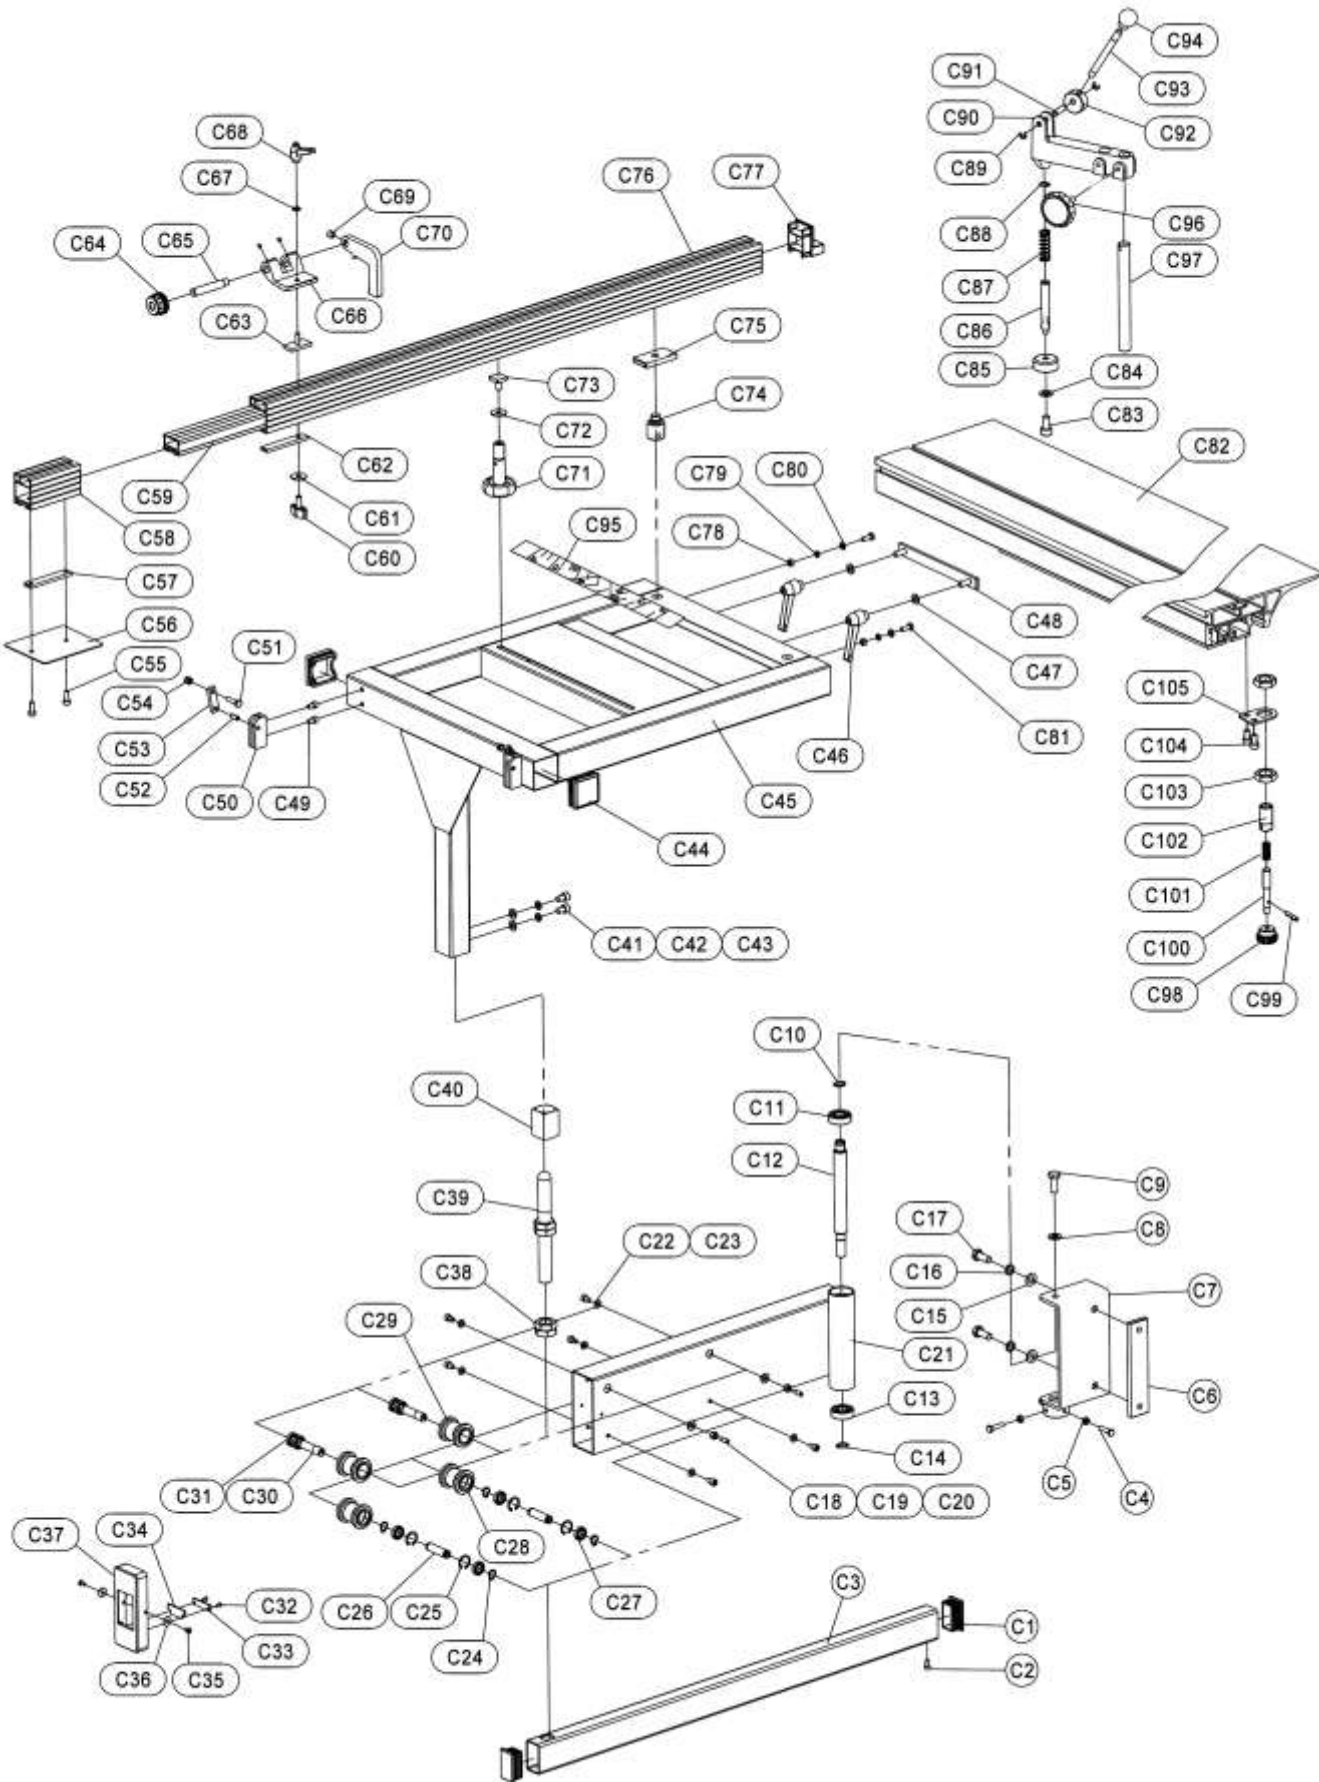

Parts List for JTS-1600XL Sliding Table Saw

Index No.	Part No.	Description	Size	Qty
A1	JTS1600XL-A01	Hand wheel		2
A2	GB70.1	Socket Head Cap Screw	M6X16	2
A3	JTS1600XL-A03	Stop Collar		1
A4	JTS1600XL-A04	Bearing	GE12E	1
A5	JTS1600XL-A05	"C"ring	Φ22	1
A6	JTS1600XL-A06	Bracket		1
A7	JTS1600XL-A07	Thread spindle		1
A8	GB93	Spring washer	Φ8	2
A9	GB96	Large washer	Φ8	2
A10	GB5781	Hex Cap Screw	M8X30	2
A11	JTS1600XL-A11	Screw		1
A12A	JTS1600XL-A12A	Locking Handle Assembly (#A11~#A16)		1
A12	JTS1600XL-A12	Locking handle		1
A13	JTS1600XL-A13	Spring		1
A14	JTS1600XL-A14	Locking bush		1
A15	JTS1600XL-A15	Spring pin	Φ3X20	1
A16	JTS1600XL-A16	Locking spindle		1
A17	GB41	Hex nut	M12	1
A18	GB6170	Hex flange nut	M12	1
A19	GB96	Large washer	Φ8	1
A20	GB96	Large washer	Φ8	4
A21	GB93	Spring washer	Φ8	4
A22	GB5781	Hex Cap Screw	M8X30	4
A23	JTS1600XL-A23	Thread nut		1
A24	JTS1600XL-A24	Plastic washer		2
A25	JTS1600XL-A25	Saw assembly		1
A26A	JTS1600XL-A26A	Blade Guard Assembly (#A26~#A32)		1
A26	JTS1600XL-A26	Locking button		1
A27	GB6170	Locking nut	M5	1
A28	JTS1600XL-A28	Blade guard		1
A29	JTS1600XL-A29	Blade guard		1
A30	GB819	Flat Head Cap Screw	M5X30	1
A31	JTS1600XL-A31	Square neck bolt	M6X40	1
A32	JTS1600XL-A32	self-tapping screw	ST3.5X25	4
A33	JTS1600XL-A33	Push handle		1
A34	GB41	Hex nut	M10	1
A35	JTS1600XL-A35	Hex nut		1
A36	JTS1600XL-A36	Hex bolt		1
A37	GB96	Large washer	Φ10	1
A38	JTS1600XL-A38	Press assembly		1
A39	JTS1600XL-A39	Sliding table assembly		1
A40	JTS1600XL-A40	Stand		1
A41	JTS1600XL-A41	screw	ST3.8X16	2
A42	JTS1600XL-A42M	Switich 230V	DZ07 -230V	1
	JTS1600XL-A42T	Switich 400V	DZ07C-400V	1
A43	GB70.1	Socket Head Cap Screw	M8X12	6
A44	GB93	Spring washer	Φ8	6
A45	GB96	Flat Washer	Φ8	6
A46	JTS1600XL-A46	Stopping plate		1
A47	GB5781	Hex Cap Screw	M6X50	2
A48	GB41	Hex nut	M6	2
A49	JTS1600XL-A49	Support block		2
A50	GB93	Spring washer	Φ8	2
A51	GB41	Hex. Nut	M8	2
52	GB41	Hex nut	M8	6
A53	GB93	Spring washer	Φ8	6
A54	GB96	Flat Washer	Φ8	6
A55	GB5781	Hex Cap Screw	M8X20	4

Parts List for JTS-1600XL Sliding Table Saw

Index No.	Part No.	Description	Size	Qty
A56	GB93	Spring washer	Φ8	4
A57	JTS1600XL-A57	Square block		2
A58	GB41	Hex nut	M8	4
A59	JTS1600XL-A59	Adjusting block		2
A60	JTS1600XL-A60	T-bolt		2
A61	JTS1600XL-A61	Interlock switch	QKS8	1
A62	GB41	Hex nut	M4	2
A63	GB96	Flat Washer	Φ4	2
A64	GB818	Pan Head Cap Screw	M4X30	2
A65	JTS1600XL-A65	Key plate		1
A66	JTS1600XL-A66	Key	QKS8	1
A67	JTS1600XL-A67	Guard plate		1
A68	GB818	Pan Head Cap Screw	M4X10	2
A69	GB818	Pan Head Cap Screw	M4X10	2
A70	JTS1600XL-A70	Miter gauge(optional)		1
A71	GB818	Pan Head Cap Screw	M4X16	4
A72	JTS1600XL-A72	Plug	DT513(5)	1
A73	GB818	Pan Head Cap Screw	M5X8	2
A74	GB96	Flat Washer	Φ5	2
A75	JTS1600XL-A75	Switch plate		1
A76	JTS1600XL-A76	3-way pipe		1
A77	JTS1600XL-A77	Protective cover		1
A78	GB96	Flat Washer	Φ6	4
A79	GB818	Pan Head Cap Screw	M6X10	4
A82	GB96	Flat Washer	Φ8	8
A83	GB41	Hex nut	M8	8
A84	JTS1600XL-A84	Dual head bolt		4
A85	JTS1600XL-A85	Leader pole		1
A86	JTS1600XL-A86	Ruler support		1
A87	GB818	Pan Head Cap Screw	M6X10	2
A88	GB96	Flat Washer	Φ6	2
A89	GB819	Flat Head Cap Screw	M5x10	4
A90	JTS1600XL-A90	Insert		1
A91	JTS1600XL-A91	Table		1
A92	GB96	Flat Washer	Φ8	4
A93	GB5781	Hex Cap Screw	M8X30	4
A94	JTS1600XL-A94	Extend table		1
A95	GB5781	Hex Cap Screw	M6X30	4
A96	GB96	Flat Washer	Φ6	8
A97	GB41	Hex nut	M6	4
A98	JTS1600XL-A98	Square supporting		1
A99	JTS1600XL-A99	T supporting		1
A100	GB5781	Hex Cap Screw	M8X30	2
A101	GB96	Flat Washer	Φ8	4
A102	GB41	Hex nut	M8	4
A103	GB96	Flat Washer	Φ8	3
A104	GB5781	Hex Cap Screw	M8X16	3
A105	JTS1600XL-A105	Extend table		1
A106	GB41	Hex nut	M5	2
A107	GB96	Flat Washer	Φ5	4
A108		Screw	M5X12	2
IA109	JTS1600XL-A109	Support bracket		1
A110	GB818	Pan Head Cap Screw	M6X16	2
A111	GB96	Flat Washer	Φ6	4
A112	GB41	Hex nut	M6	4
A113	JTS1600XL-A113	Underprop		1
A114	JTS1600XL-A114	Support column		1

Parts List for JTS-1600XL Sliding Table Saw

Index No.	Part No.	Description	Size	Qty
A115...	GB70.1	Socket Head Cap Screw	M8X12	2
A116...	JTS1600XL-A116	Fixing plate		1
A117...	GB70.1	Socket Head Cap Screw	M6X12	1
A118...	GB96	Very large washer	Φ6	1
A119...	JTS1600XL-A119	Square nut		1
A120...	GB818	Pan Head Cap Screw	M6X16	4
A121...	JTS1600XL-A120A	E-stop switch Assembly (#A121~#A123)		1
A121...	JTS1600XL-A121	E-stop switch		1
A122...	JTS1600XL-A122	E-stop box		1
A123...	GB818	Pan Head Cap Screw	M4X16	2
A124...	GB79	Socket Set Screw	M6X6	2
A145...	JTS1600XL-A145	Micro-adjust handle		1
A146...	JTS1600XL-A146	Wave washer	Φ6	1
A147...	GB96	Large washer	Φ6	2
A148...	JTS1600XL-A148	Locking handle		1
A149...	JTS1600XL-A149	Micro-adjust support		1
A150...	JTS1600XL-A150	Clamp		1
A151...	JTS1600XL-A151	Thin hex nut	M6	2
A152...	JTS1600XL-A152	Locking button		2
A153...	GB96	Large washer	Φ6	2
A154...	JTS1600XL-A154	Linking plate		1
A155...	JTS1600XL-A155	Square neck bolt	M6X35	1
A156...	GB70.1	Socket Head Cap Screw	M8X45	2
B1.....	GB70.1	Socket Head Cap Screw	M8X25	3
B2.....	GB93	Spring washer	Φ8	3
B3.....	GB96	Flat Washer	Φ8	3
B4.....	JTS1600XL-B04	Forehand support		1
B5.....	JTS1600XL-B05	Square nut		3
B6.....	JTS1600XL-B06	Thread nut		1
B7.....	JTS1600XL-B07	Thread spindle		1
B8.....	JTS1600XL-B08	Bush washer		2
B9.....	JTS1600XL-B09	Bush		1
B10....	JTS1600XL-B10	"C"ring	Φ18	2
B11....	GB5781	Hex Cap Screw	M6X20	4
B12....	GB93	Spring washer	Φ6	4
B13....	GB96	Large washer	Φ6	4
B14....	JTS1600XL-B14	Limited plate		1
B15....	GB5781	Hex Cap Screw	M6X60	1
B16....	GB70.1	Socket Head Cap Screw	M6X20	1
B17....	GB41	Hex nut	M6	2
B18....	GB818	Pan Head Cap Screw	M4X8	1
B19....	GB96	Flat Washer	Φ4	1
B20....	JTS1600XL-B20	Pointer		1
B21....	JTS1600XL-B21	Pointer support		1
B22....	GB96	Flat Washer	Φ8	1
B23....	GB41	Hex nut	M8	1
B24....	GB6170	Hex locking nut	M8	1
B25....	GB96	Large washer	Φ8	1
B26....	JTS1600XL-B26	Circumrotate bracket		1
B27....	JTS1600XL-B27	Thread bolt		1
B28....	GB6170	Hex thin nut	M16X1.5	1
B29....	GB41	Hex nut	M4	8
B30....	GB93	Spring washer	Φ4	8
B31....	JTS1600XL-B31	Dust collector		1
B32....	GB96	Flat Washer	Φ5	3
B33....	GB818	Pan Head Cap Screw	M5X8	3
B34....	GB818	Pan Head Cap Screw	M4X8	8
B35....	JTS1600XL-B35	Hinge	50	2

Parts List for JTS-1600XL Sliding Table Saw

Index No.	Part No.	Description	Size	Qty
B36	JTS1600XL-B36	Dust collector		1
B37	GB96	Large washer	Φ5	2
B38	GB70.1	Socket Head Cap Screw	M5X10	2
B39	GB6170	Hex locking nut	M8	1
B40	JTS1600XL-B40	Linking plate		1
B41	JTS1600XL-B41	Pin		1
B42	GB6170	Hex thin nut	M8	1
B43	GB70.1	Socket Head Cap Screw	M8X25	4
B44	GB93	Spring washer	Φ8	4
B45	JTS1600XL-B45	Belt	150J	1
B46	GB5781	Hex Cap Screw	M8X20	1
B47	GB93	Spring washer	Φ8	1
B48	JTS1600XL-B48	Driven pulley		1
B49	GB41	Hex nut	M8	4
B50	GB93	Spring washer	Φ8	4
B51	GB96	Flat Washer	Φ8	4
B52	GB96	Very large washer	Φ8	1
B53	JTS1600XL-B53	Circumrotate plate		1
B54	JTS1600XL-B54	Dual head bolt		4
B55	JTS1600XL-B55	Behind support		1
B56	JTS1600XL-B56	Flange bush		1
B57	JTS1600XL-B57	"C"ring	Φ42	1
B58	GB276	Bearing	6004	3
B59	JTS1600XL-B59	Saw axis		1
B60	JTS1600XL-B60	Key	6X20	1
B61	JTS1600XL-B61	Square neck bolt	M10X25	1
B62	JTS1600XL-B62	Parallel plate		1
B63	GB79	Socket Set screw	M6X12	4
B64	JTS1600XL-B64	Clamp plate		1
B65	JTS1600XL-B65	Interior clamp plate		1
B66	GB80	Socket Set screw	M6X12	4
B67	JTS1600XL-B67	Riving wedge		1
B68	JTS1600XL-B68	Outer clamp plate		1
B69	GB93	Spring washer	Φ10	1
B70	JTS1600XL-B70	Hex thin nut	M10	1
B71	GB6170	Hex locking nut	M8	2
B72	JTS1600XL-B72	Saw blade	Φ315X24T	1
B73	JTS1600XL-B73	Flange disc		1
B74	GB96	Large washer	Φ12	1
B75	GB41	Hex nut	M12-L	1
B76	JTS1600XL-B76M	Motor	~230V	1
	JTS1600XL-B76T	Motor	3~400V	1
B77	JTS1600XL-B77	Sliding bolt		1
B78	GB96	Large washer	Φ8	1
B79	JTS1600XL-B79	Sliding bush		1
B80	JTS1600XL-B80	Very large washer	Φ6	1
B81	GB5781	Hex Cap Screw	M8X16-L	1
B82	GB96	Larger washer	Φ8	1
B83	JTS1600XL-B83	Motor pulley		1
B84	GB819	Flat Head Cap Screw	M6X16	4
B85	JTS1600XL-B85	Motor supporting plate		1
B86	JTS1600XL-B86	"C"ring	Φ19	1
C1	JTS1600XL-C01	Tube cap		2
C2	GB70.1	Socket Head Cap Screw	M6X10	1
C3	JTS1600XL-C03	Telescopic tube		1
C4	GB5781	Hex Cap Screw	M6X25	4
C5	GB41	Hex nut	M6	4
C6	JTS1600XL-C06	Connection plate		1

Parts List for JTS-1600XL Sliding Table Saw

Index No.	Part No.	Description	Size	Qty
C7	JTS1600XL-C07	Fixing bracket		1
C8	GB96	Flat Washer	Φ10	1
C9	GB5781	Hex Cap Screw	M10X25	1
C10	JTS1600XL-C10	"C"ring	Φ15	1
C11	GB276	Bearing	6202	1
C12	JTS1600XL-C12	Shaft		1
C13	GB276	Bearing	6202	1
C14	JTS1600XL-C14	"C"ring	Φ15	1
C15	GB96	Flat Washer	Φ10	2
C16	GB93	Spring washer	Φ10	2
C17	GB5781	Hex Cap Screw	M10X25	2
C18	JTS1600XL-C18	Hex socket screw		2
C19	GB41	Hex nut	M6	2
C20	JTS1600XL-C20	Outside baffle		2
C21	JTS1600XL-C21	Support for telescopic tube		1
C22	GB96	Flat Washer	Φ6	6
C23	GB70.1	Socket Head Cap Screw	M6X10	6
C24	JTS1600XL-C24	"C"ring	Φ12	4
C25	JTS1600XL-C25	"C"ring	Φ21	4
C26	JTS1600XL-C26	Shaft		2
C27	GB276	Bearing	61801	4
C28	JTS1600XL-C28	Lower wheel		2
C29	JTS1600XL-C29	Upper wheel		2
C30	JTS1600XL-C30	Eccentric shaft		2
C31	GB276	Bearing	61801	4
C32	GB79	Socket Set screw	M3X6	4
C33	JTS1600XL-C33	Fixing plate		2
C34	JTS1600XL-C34	Brush		2
C35	GB818	Pan Head Cap Screw	M4X8	2
C36	GB96	Large washer	Φ5	2
C37	JTS1600XL-C37	End cover		1
C38	GB6170	Hex thin nut	M20X1.5	4
C39	JTS1600XL-C39	Support rod		1
C40	JTS1600XL-C40	Link block		1
C41	GB70.1	Socket Head Cap Screw	M8X12	2
C42	GB93	Spring washer	Φ8	2
C43	GB96	Flat Washer	Φ8	2
C44	JTS1600XL-C44	Tube cap		2
C45	JTS1600XL-C45	Ext. sliding table		1
C46	JTS1600XL-C46	Handle		2
C47	GB96	Flat Washer	Φ8	2
C48	JTS1600XL-C48	Clamping plate		1
C49	GB70.1	Socket Head Cap Screw	M6X8	4
C50	JTS1600XL-C50	Positive block		2
C51	GB5781	Hex Cap Screw	M6X25	2
C52	JTS1600XL-C52	Spring pin	6X16	2
C53	JTS1600XL-C53	Limited plate		2
C54	GB6170	Hex locking nut	M6	2
C55	GB70.1	Socket Head Cap Screw	M6X16	2
C56	JTS1600XL-C56	location plate		1
C57	JTS1600XL-C57	Fixing plate		1
C58	JTS1600XL-C58	Ext. bracket for lengthened		1
C59	JTS1600XL-C59	Main bracket for lengthened ruler		1
C60	JTS1600XL-C60	Knob		1
C61	GB96	Large washer	Φ8	1
C62	JTS1600XL-C62	Fixing plate		1
C63	JTS1600XL-C63	T-bolt		1

Parts List for JTS-1600XL Sliding Table Saw


Index No.	Part No.	Description	Size	Qty
C64	JTS1600XL-C64	Adjusting button		1
C65	JTS1600XL-C65	Bolt		1
C66	JTS1600XL-C66	Bracket		1
C67	GB96	Flat Washer	Φ6	1
C68	JTS1600XL-C68	Small handle		1
C69	GB80	Socket Set screw	M5X5	3
C70	JTS1600XL-C70	location block		1
C71	JTS1600XL-C71	Long handle		1
C72	GB96	Large washer	Φ8	1
C73	JTS1600XL-C73	Square bolt		1
C74	JTS1600XL-C74	Pivot		1
C75	JTS1600XL-C75	Square nut		1
C76	JTS1600XL-C76	Fence		1
C77	JTS1600XL-C77	Fence cover		1
C78	GB41	Hex nut	M6	2
C79	GB93	Spring washer	Φ6	2
C80	GB96	Flat Washer	Φ6	2
C81	GB5781	Hex Cap Screw	M6X16	2
C82	JTS1600XL-C82	Sliding table Ass		1
C83	GB70.1	Socket Head Cap Screw	M5X10	1
C84	GB96	Flat Washer	Φ5	1
C85	JTS1600XL-C85	Press rod		1
C86	JTS1600XL-C86	Press pole		1
C87	JTS1600XL-C87	Spring		1
C88	JTS1600XL-C88	"C"ring	Φ12	1
C89	JTS1600XL-C89	"E"ring	Φ6	2
C90	JTS1600XL-C90	Press bracket		1
C91	JTS1600XL-C91	Pin		1
C92	JTS1600XL-C92	Press wheel		1
C93	JTS1600XL-C93	Hand pole		1
C94	JTS1600XL-C94	Handball		1
C95	JTS1600XL-C95	Angle ruler		1
C96	JTS1600XL-C96	Locking knob		1
C97	JTS1600XL-C97	Spindle		1
C98	JTS1600XL-C98	Knob		1
C99	JTS1600XL-C99	Pin		1
C100	JTS1600XL-C100	Shaft		1
C101	JTS1600XL-C101	Spring		1
C102	JTS1600XL-C102	Bush, Lock Pin		1
C103	JTS1600XL-C103	Hex Nut		2
C104	GB70.1	Socket Head Cap Screw	M6x12	2
C105	JTS1600XL-C105	Fixing Plate		1
	JTS1600XL-ID	ID Label (not shown)		1
	JTS1600XL-ML	Motor Label (not shown)		1
	JTS1600XL-JET	JET LOGO (not shown)		1
	JTS1600XL-L	Model Label (not shown)		1
	JTS1600XL-WR	Warning Label (not shown)		1

Wiring Diagram for JTS-1600XL Sliding Table Saw

	colour of strands	Litzenfarben	couleur des cordons
BK	black	schwarz	noir
WH	white	weiß	blanc
BU	blue	blau	bleu
YE	yellow	gelb	jaune
RD	red	rot	rouge
BN	brown	braun	brun
GY	grey	grau	gris
GNYE	green-yellow	grün-gelb	vert-jaune
OG	orange	orange	orange
VT	violet	violett	violet

	meaning of symbol	Bedeutung der Zeichen	interprétation
M	motor	Motor	moteur
S	switch	Schalter	interrupteur
C	condenser	Kondensator	condensateur
E	electronic unit	Elektronik Einheit	unité électronique
F	fuse	Sicherung	fusible
RS	reversing switch	Drehrichtungsschalter	commu. droite/gauche
CS	centrifugal switch	Fliehkraftschalter	déclencheur centrifuge
OL	overload cut-off	Überlastschuttschalter	déclencheur surcharge
LS	limit switch	Positionsendschalter	micro

JR 044.....~230V, 50Hz

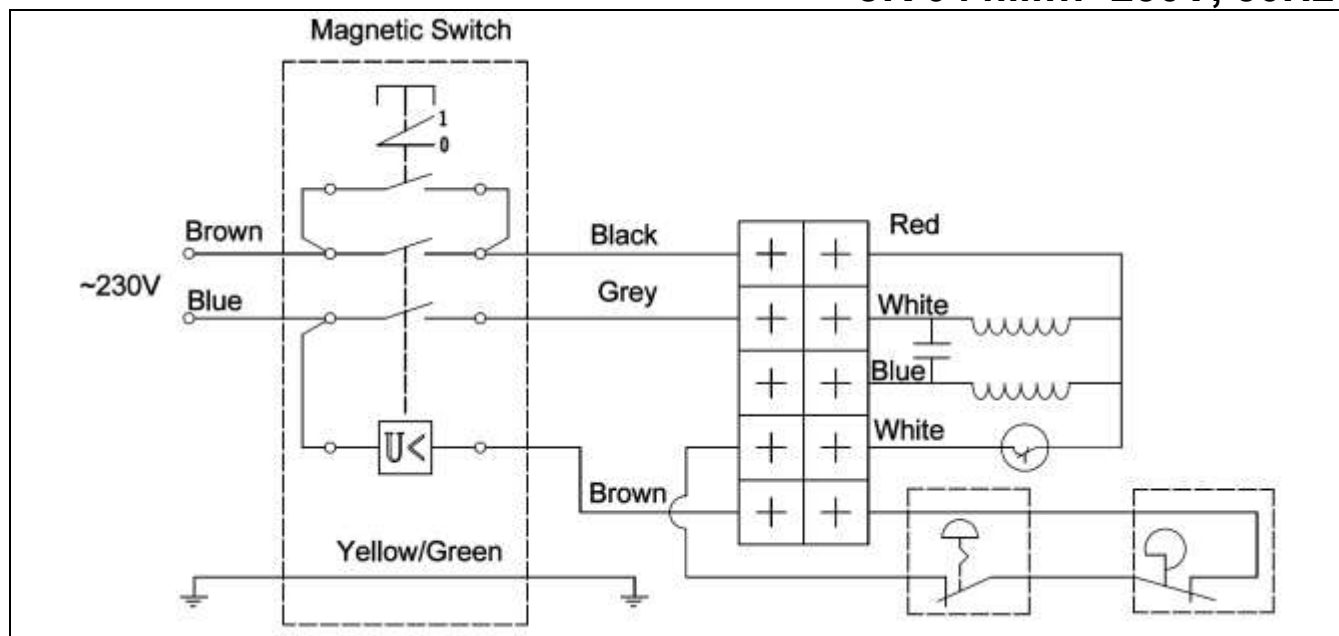

JR 100.....3~400V, 50Hz

