



JWBS-16SC

Band Saw

JWBS-16SC

~230V 50Hz

JWBS-16SC

3~400V 50Hz


PARTS LIST




Импортер в РФ: ООО «ИТА Технолоджи»
105082, Москва, Переведеновский пер., д. 17
www.jettools.ru
Made in PRC / Сделано в КНР

P-JR046, JR101, 2026-06


Parts Breakdown for JWBS-16SC Band Saw A

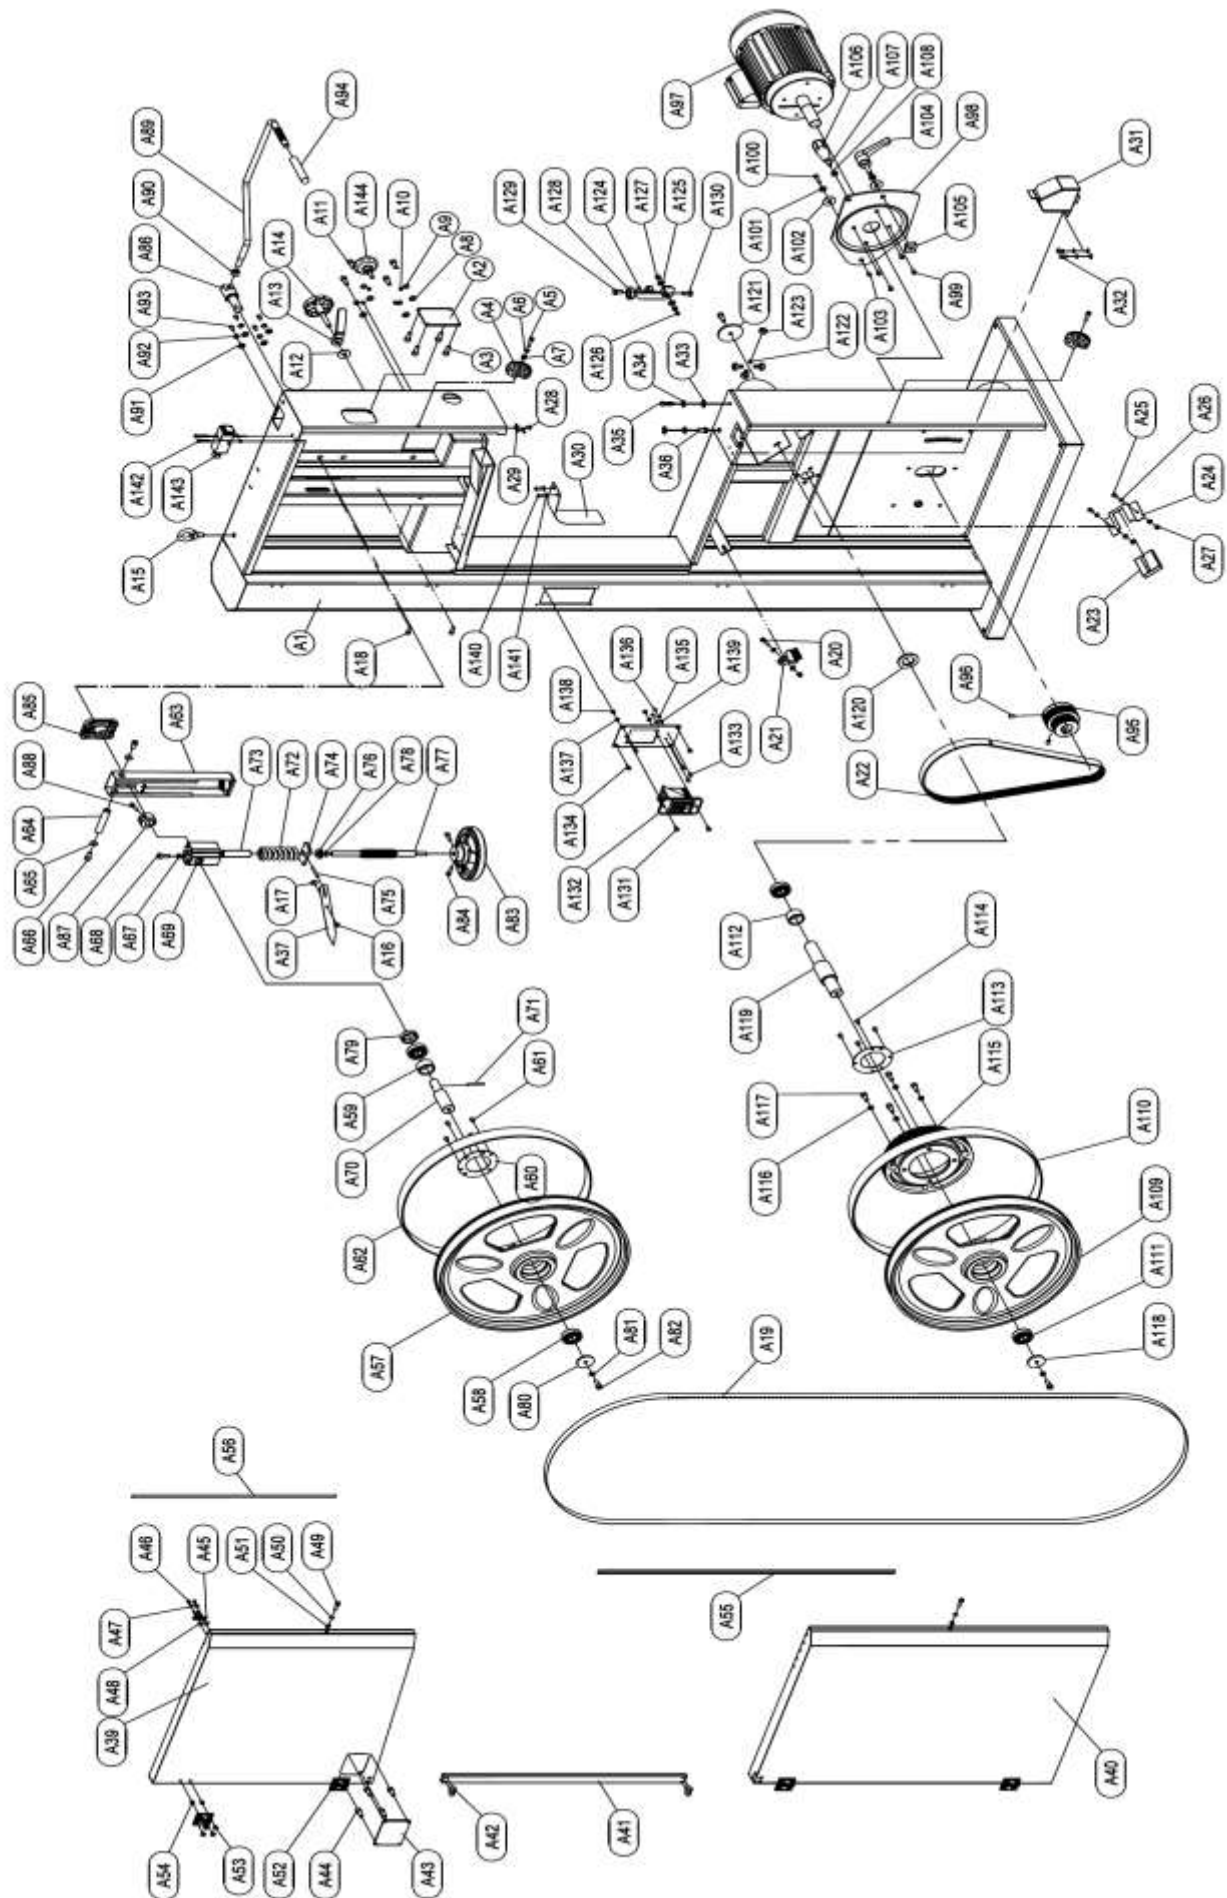


Parts Breakdown for JWBS-16SC Band Saw A

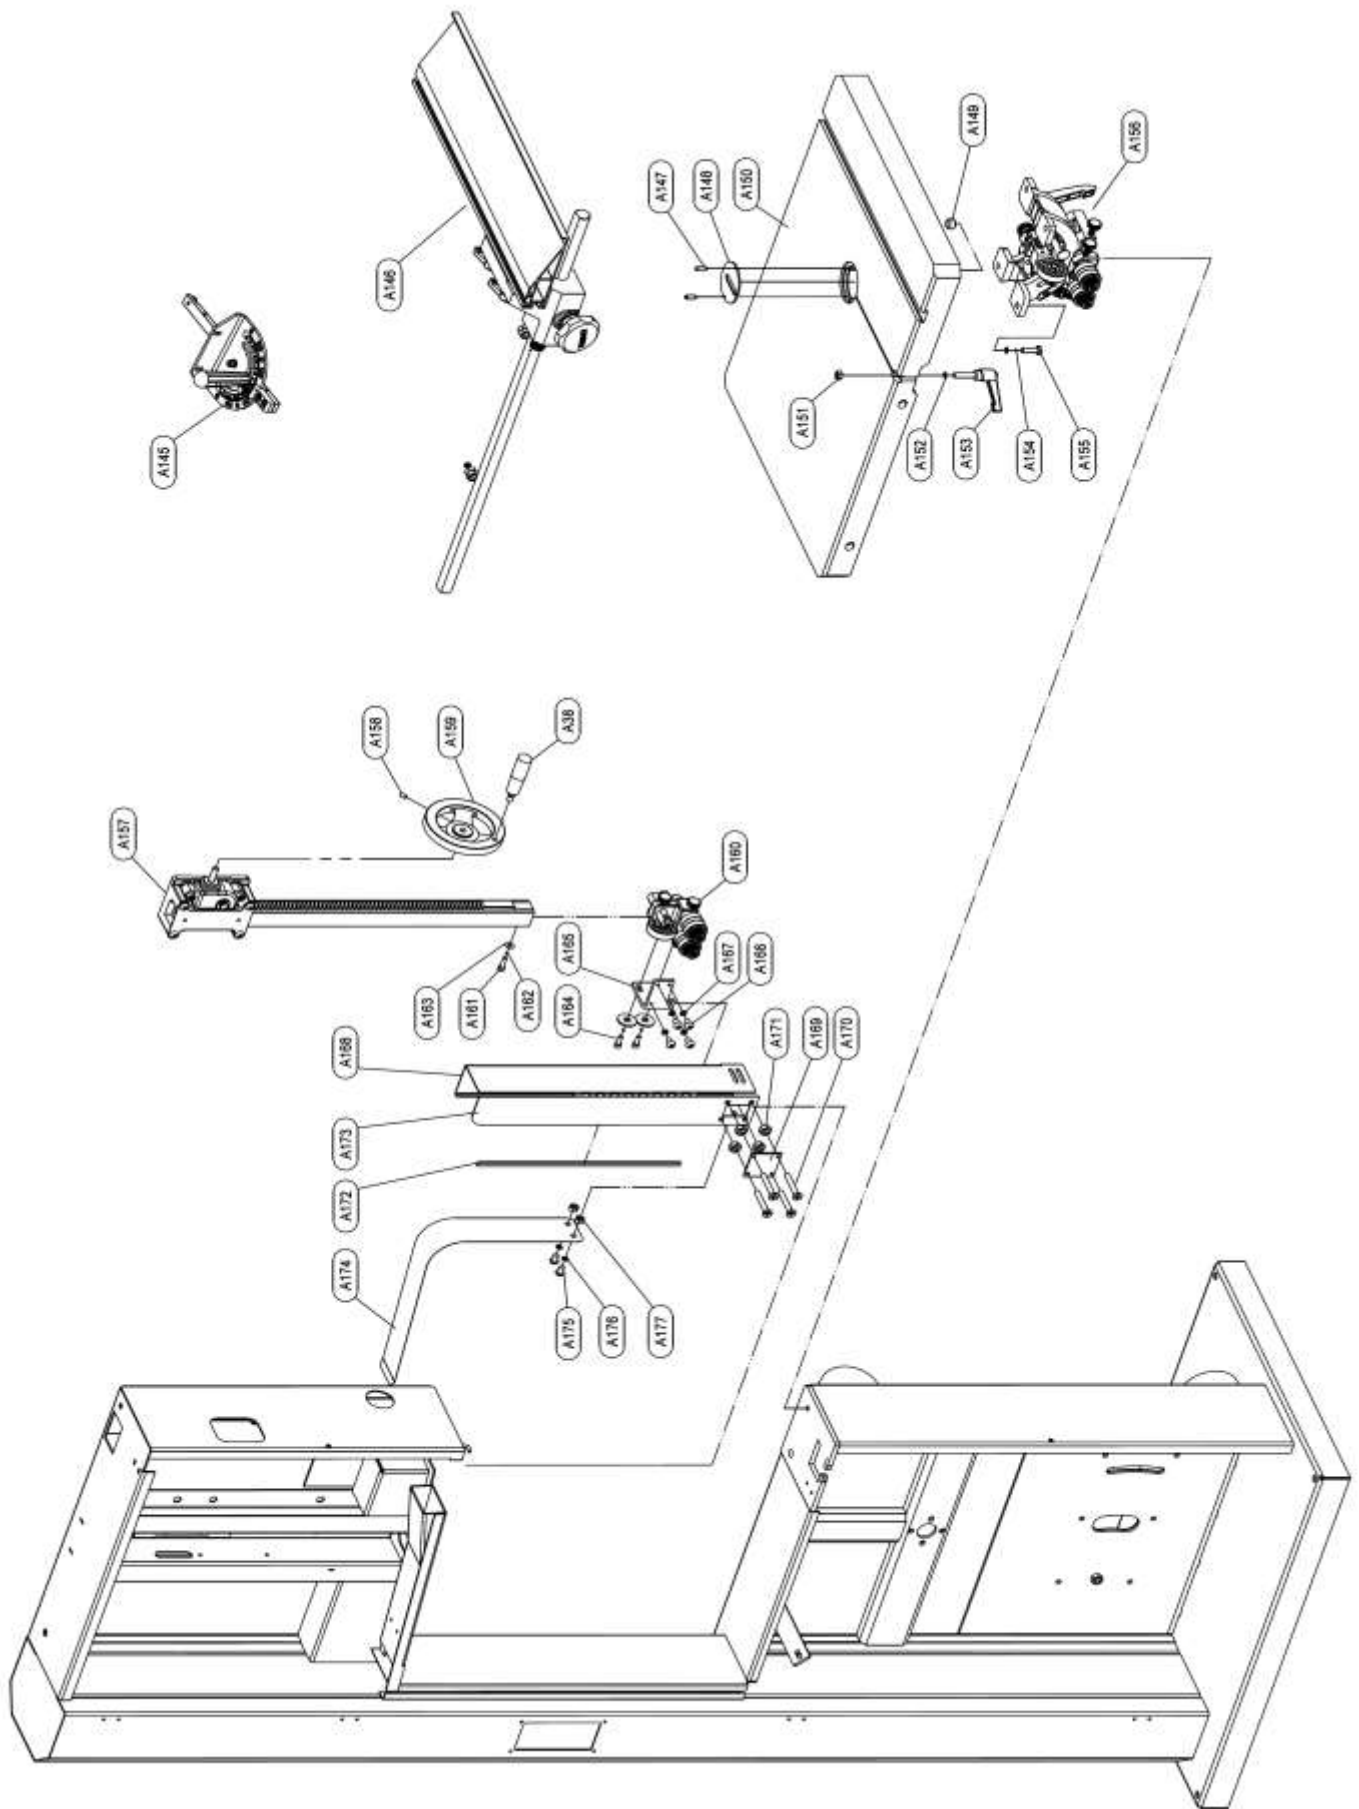

Parts Breakdown for JWBS-16SC Band Saw—B

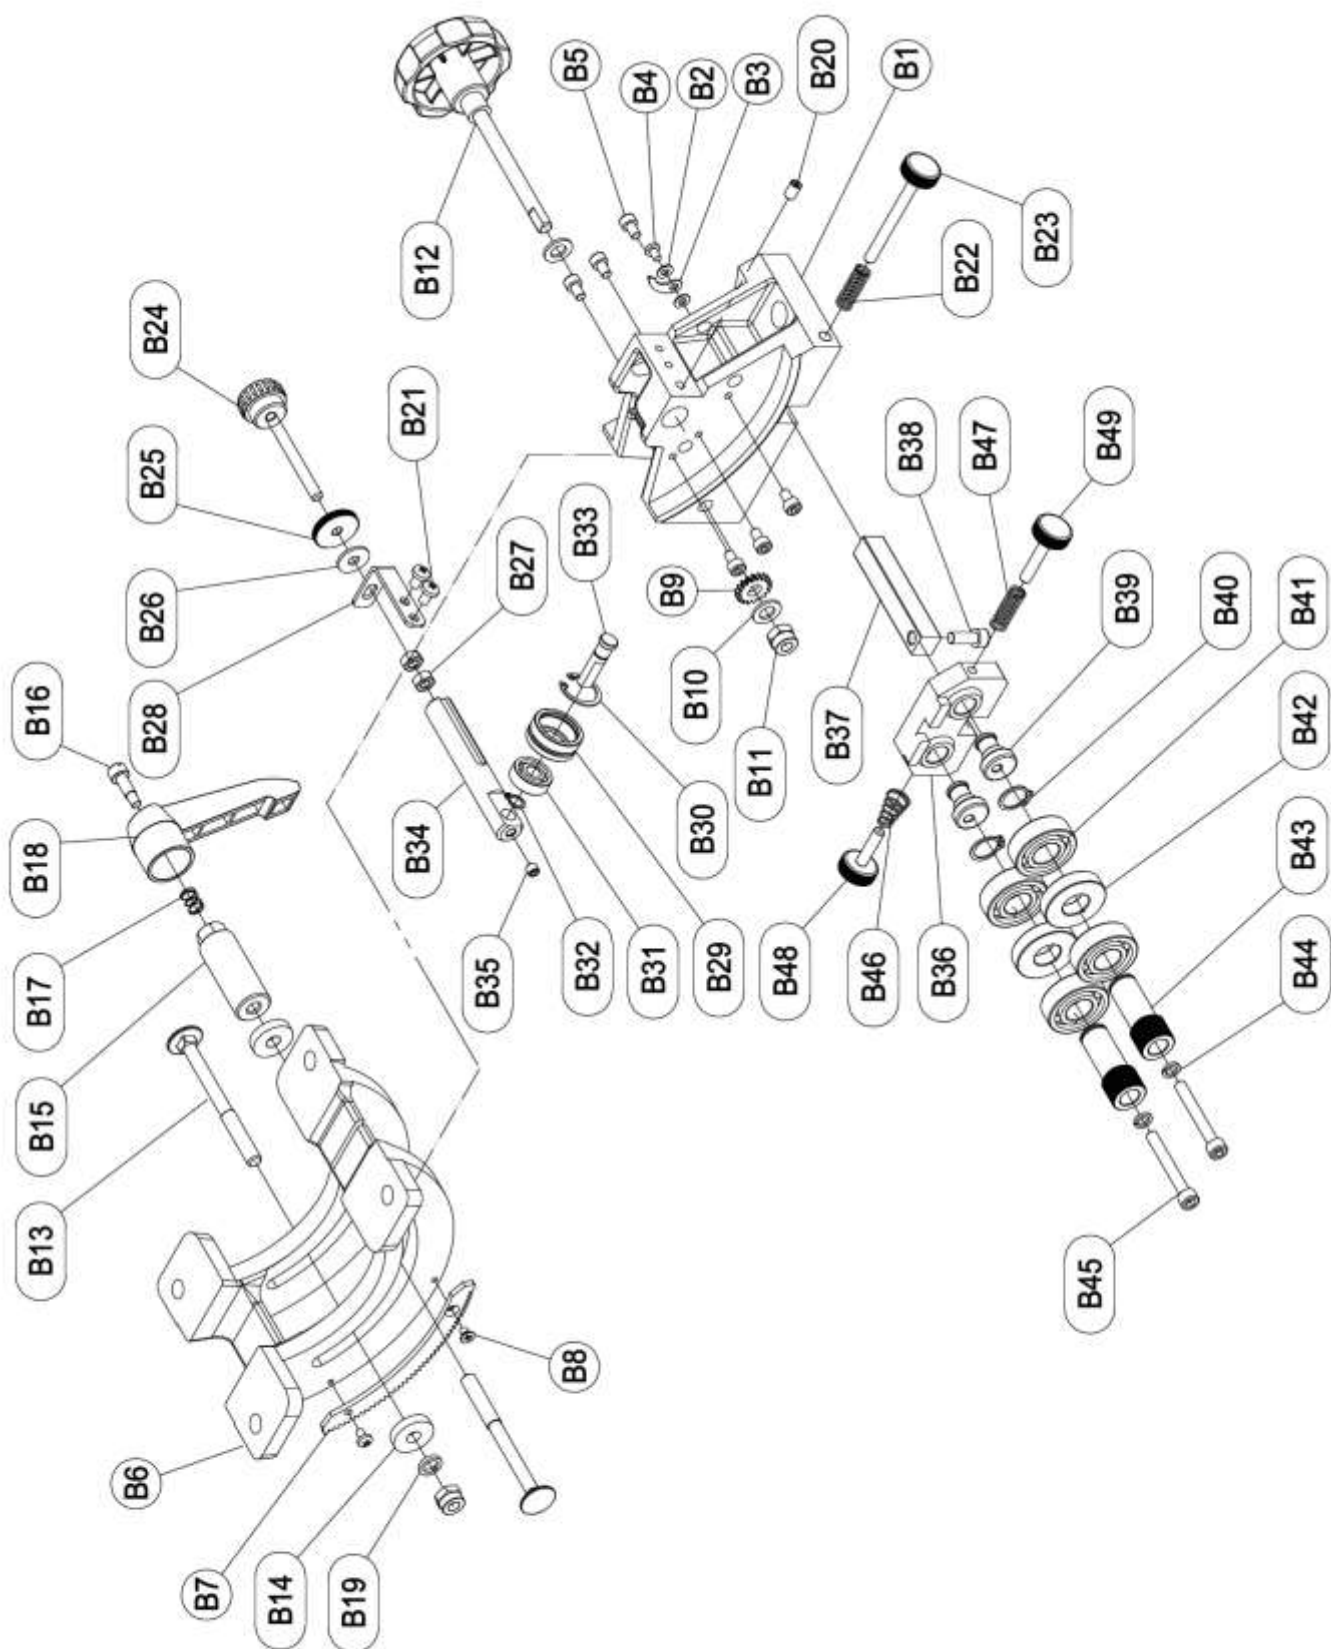

Parts Breakdown for JWBS-16SC Band Saw--C,D,E

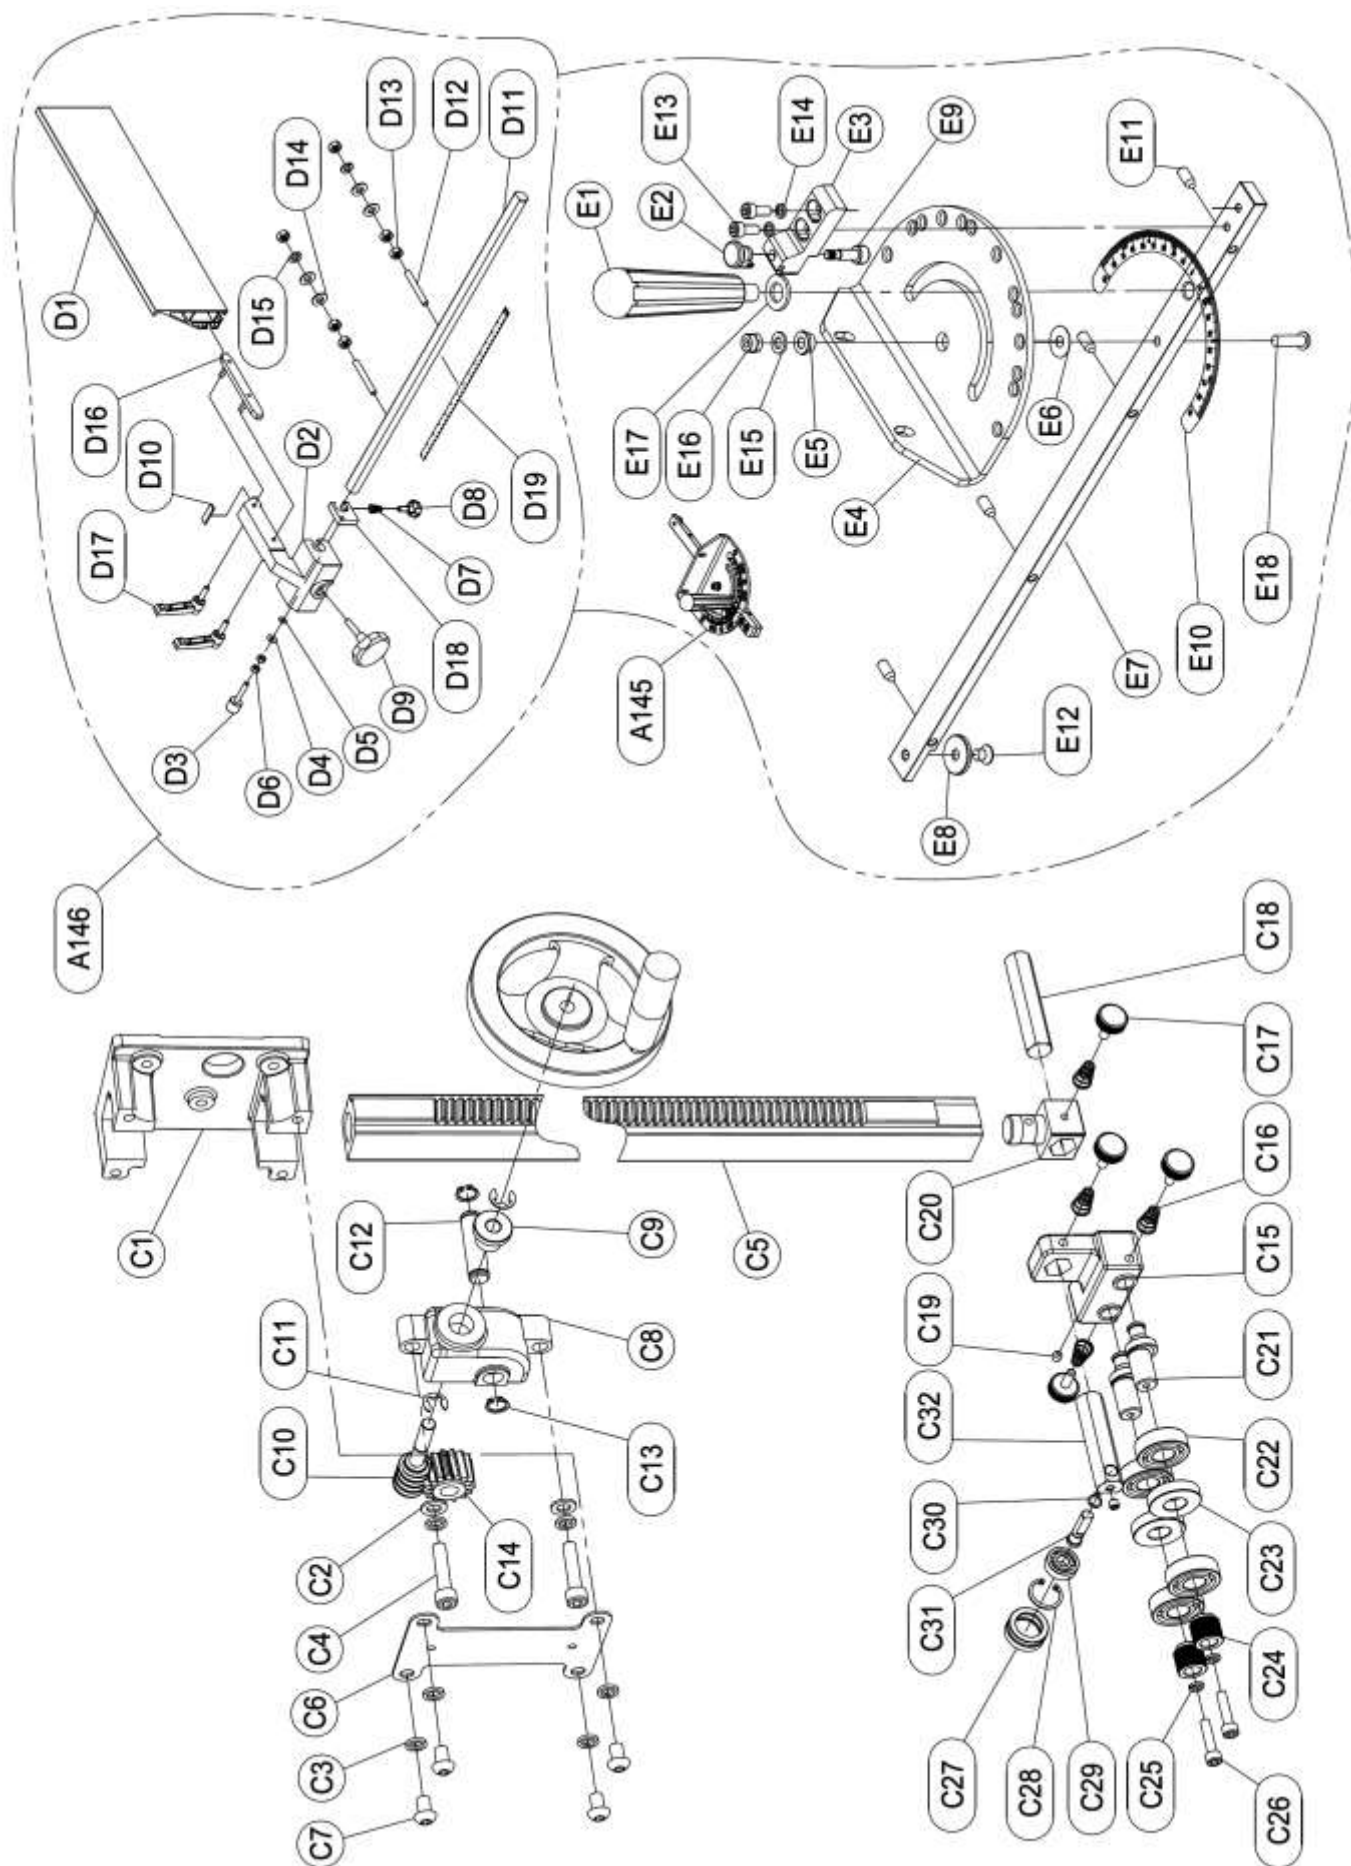

Parts List for JWBS-16SC Band Saw

Index No.	Part No.	Description	Size	Qty
-----------	----------	-------------	------	-----

A1	JWBS16SC-A001	Machine Main Body Frame		1
A2	JWBS16SC-A002	Viewing Window		1
A3	GB70.1	Socket Head Cap Screw	M4X10	4
A4	JWBS16SC-A004	Knob		2
A5	GB70.1	Socket Head Cap Screw	M6X25	3
A6	GB96	Flat Washer	Ø 6	10
A7	GB6170	Hex.Locking Nut	M6	3
A8	GB96	Washer	Ø 8	4
A9	GB93	Spring Washer	Ø 8	4
A10	GB80	Socket Set Screw	M8X6	4
A11	GB70.1	Socket Head Cap Screw	M8X20	4
A12	GB96	Large Washer	Ø 10	1
A13	JWBS16SC-A013	Lock Handle		1
A14	JWBS16SC-A014	Lock Knob		1
A15	JWBS16SC-A015	Lifting Ring	M10	1
A16	JWBS16SC-A016	Step Screw		1
A17	JWBS16SC-A017	Flat Washer		1
A18	GB70.1	Socket Head Cap Screw	M6X16	2
A19	JWBS16SC-A019	Saw Blade	3810	1
A20	GB70.1	Socket Head Cap Screw	M6X25	3
A21	JWBS16SC-A021	Brush		1
A22	JWBS16SC-A022	Poly-V Belt	9PJ1092-430J	1
A23	JWBS16SC-A023	Dust Collect Insert		1
A24	JWBS16SC-A024	Fixed Plate		1
A25	GB70.2	Socket Head Cap Screw	M6X12	2
A26	GB93	Spring Washer	Ø 6	4
A27	GB6170	Hex. Nut	M6	4
A28	GB818	Pan head Cap Screw	M5X8	1
A29	JWBS16SC-A029	Pointer		1
A30	JWBS16SC-A030	Short Spring Plate		1
A31	JWBS16SC-A031	Lower Blade Guard		1
A32	GB70.1	Socket Head Cap Screw	M6X10	2
A33	GB96	Flat Washer	Ø 10	2
A34	GB93	Spring Washer	Ø 10	2
A35	GB70.1	Socket Head Cap Screw	M10X35	1
A36	GB5781	Hex.Cap Screwt	M10X35	1
A37	JWBS16SC-A037	Tension Pointer		1
A38	JWBS16SC-A038	Handle Sleeve		1
A39	JWBS16SC-A039	Upper Cabinet Door		1
A40	JWBS16SC-A040	Lower Cabinet Door		1
A41	JWBS16SC-A041	Cabinet Door Connection Tube		1
A42	GB70.2	Socket Head Cap Screw	M5X10	4
A43	JWBS16SC-A043	Viewing Window		1
A44	GB70.1	Socket Head Cap Screw	M4X10	4
A45	JWBS16SC-A045	Key For Swith		1
A46	GB70.2	Socket Head Cap Screw	M4X10	2
A47	GB96	Flat Washer	Ø 4	2
A48	JWBS18SC-A048	Key Plate		1
A49	GB70.1	Socket Head Cap Screw	M6X12	2
A50	GB93	Spring Washer	Ø 6	2
A51	GB6170	Hex.Locking Nut	M6	2
A52	JWBS16SC-A052	Hinge	40X40	2
A53	GB70.3	Pan Flat Machine Screw	M5X14	16
A54	GB6170	Hex.Locking Nut	M5	8
A55	JWBS16SC-A055	Sponge		1
A56	JWBS16SC-A056	Sponge		1
A57	JWBS18SC-A057	Upper Wheel		1

Parts List for JWBS-16SC Band Saw

Index No.	Part No.	Description	Size	Qty
-----------	----------	-------------	------	-----

A58	GB276	Bearing	6206	2
A59	JWBS16SC-A059	Bushing		1
A60	JWBS16SC-A060	Bearing Press Plate		1
A61	GB70.2	Socket Head Cap Screw	M6X10	4
A62	JWBS16SC-A062	Tire		1
A63	JWBS16SC-A063	Upper Wheel Sliding Bracket		1
A64	JWBS16SC-A064	Upper Shaft		1
A65	GB96	Large Washer	Ø 8	2
A66	GB70.1	Socket Head Cap Screw	M8X16	2
A67	GB41	Hex. Nut	M6	1
A68	GB70.1	Socket Head Cap Screw	M6X50	1
A69	JWBS16SC-A069	Upper Wheel Sliding Bracket		1
A70	JWBS16SC-A070	Upper Wheel Shaft		1
A71	JWBS16SC-A071	Pin	5X35	1
A72	JWBS16SC-A072	Spring		1
A73	JWBS16SC-A073	Bushing		1
A74	JWBS16SC-A074	Locate Block		1
A75	JWBS16SC-A075	Pin	3X20	1
A76	GB276	Bearing	51201	1
A77	JWBS16SC-A077	Adjusting Bolt		1
A78	JWBS16SC-A078	"E" Ring	Ø 15	1
A79	JWBS16SC-A079	Bush		1
A80	JWBS16SC-A080	Flat Washer		1
A81	GB93	Spring Washer	Ø 8	1
A82	GB70.1	Socket Head Cap Screw	M8X20	1
A83	JWBS16SC-A083	Handwheel		1
A84	GB70.1	Socket Head Cap Screw	M6X20	1
A85	JWBS16SC-A085	Shaft Fixed Block		1
A86	JWBS16SC-A086	Tension Quick Release Lever Shaft		1
A87	JWBS16SC-A087	Cam		1
A88	GB70.1	Socket Head Cap Screw	M6X25	1
A89	JWBS16SC-A089	Tension Quick Release Lever		1
A90	GB6170	Hex. Nut	M12	1
A91	GB96	Flat Washer	Ø 8	4
A92	GB93	Spring Washer	Ø 8	4
A93	GB70.2	Socket Head Cap Screw	M8X20	4
A94	JWBS16SC-A094	Grip		1
A95	JWBS16SC-A095	Motor Pulley		1
A96	GB78	Socket Set Screw	M6X12	2
A97	JWBS16SC-A097T	Motor	3~400V	1
	JWBS16SC-A097M	Motor	~230V	1
A98	JWBS18SC-A098	Motor Bracket		1
A99	GB70.2	Socket Head Cap Screw	M8X16	4
A100	GB70.1	Socket Head Cap Screw	M10X35	1
A101	GB93	Spring Washer	Ø 10	2
A102	GB96	Large Washer	Ø 10	2
A103	GB6170	Hex. Locking Nut	M10	1
A104	JWBS16SC-A104	Motor Bracket Lock Handle		1
A105	JWBS16SC-A105	Locating Block		1
A106	JWBS16SC-A106	Handle		1
A107	GB5781	Hex. Cap Screw	M8X30	1
A108	GB41	Hex. Nut	M8	1
A109	JWBS16SC-A109	Lower Wheel		1
A110	JWBS16SC-A110	Tie		1
A111	GB276	Bearing	6306	2
A112	JWBS16SC-A112	Bushing		1
A113	JWBS16SC-A113	Bearing Press Plate		1
A114	JWBS16SC-A114	Screw	M6X10	4
A115	JWBS16SC-A115	Pulley		1

Parts List for JWBS-16SC Band Saw

Index No.	Part No.	Description	Size	Qty
A116...	GB93	Spring Washer	Ø 8	5
A117...	GB70.1	Socket Head Cap Screw	M8X20	6
A118...	JWBS16SC-A118	Washer		1
A119...	JWBS16SC-A119	Lower Wheel Shaft		1
A120...	JWBS16SC-A120	Plate		1
A121...	JWBS16SC-A121	Washer		1
A122...	GB78	Socket Set Screw	M10X30	4
A123...	GB41	Hex.Nut	M10	4
A124...	JWBS16SC-A124	Support Plate		1
A125...	GB96	Flat Washer	Ø 8	2
A126...	GB78	Socket Set Screw	M8X50	1
A127...	GB6170	Hex. Locking Nut	M8	2
A128...	GB41	Hex.Thin Nut	M8	2
A129...	GB5781	Hex.Cap Screw	M8X40	1
A130...	GB5781	Hex. Cap Screw	M8X16	1
A131...	GB818	Pan Head Cap Screw	M5X12	2
A132...	JWBS16SC-A132	Swtich	DZ07C-400V	1
	JWBS16SC-A132M	Swtich	DZ07 -230V	1
A133...	GB818	Pan Head Cap Screw	M4X10	2
A134...	GB818	Pan Head Cap Screw	M6X8	4
A135...	GB96	Flat Washer	Ø 4	2
A136...	GB41	Hex.Nut	M4	4
A137...	GB96	Flat Washer	Ø 5	2
A138...	GB41	Hex.Nut	M5	2
A139...	JWBS16SC-A139	Tooth Washer	Ø 4	2
A140...	GB70.2	Socket Head Cap Screw	M6X10	2
A141...	GB96	Flat Washer	Ø 6	2
A142...	GB818	Pan Head Cap Screw	M4X30	2
A143...	JWBS16SC-A143	Safety Switch	QKS8	1
A144...	JWBS16SC-A144	Lock Knob		1
A145...	JWBS16SC-A145	Miter Gauge Assembly		1
A146...	JWBS16SC-A146	Rip Fence Assembly		1
A147...	JWBS16SC-A147	Pin	4X8	2
A148...	JWBS16SC-A148	Table Insert		1
A149...	GB80	Socket Set Screw	M5X6	3
A150...	JWBS16SC-A150	Table		1
A151...	GB41	Hex.Nut	M8	1
A152...	GB96	Flat Washer	Ø 8	7
A153...	JWBS16SC-A153	Handle	BM8X35	1
A154...	GB93	Spring Washer	Ø 8	5
A155...	GB5781	Hex. Cap Screw	M8X25	4
A156...	JWBS16SC-A156	Trunnion Support Bracket Assembly		1
A157...	JWBS16SC-A157	Guide Bar Bracket Assembly		1
A158...	GB80	Socket Set Screw	M6X12	1
A159...	JWBS16SC-A159	Handwheel		1
A160...	JWBS16SC-A160	Upper Blade Guide Assembly		1
A161...	GB818	Pan Head Cap Screw	M6X20	1
A162...	GB93	Spring Washer	Ø 6	3
A163...	GB96	Large Washer	Ø 6	3
A164...	GB818	Pan Head Cap Screw	M6X16	1
A165...	JWBS16SC-A165	Angle iron welding		1
A166...	GB818	Pan Head Cap Screw	M5X10	4
A167...	GB96	Flat Washer	Ø 5	4
A168...	JWBS16SC-A168	Blade Guard Cover		1
A169...	JWBS18SC-A169	Viewing Window		1
A170...	GB818	Pan Head Cap Screw	M4X10	1

Parts List for JWBS-16SC Band Saw

Index No.	Part No.	Description	Size	Qty
A171...	GB41	Hex.Nut	M4	4

A172	JWBS16SC-A172	Magnet Strip		1
A173	JWBS16SC-A173	Blade Guard Cover		1
A174	JWBS16SC-A174	Long Spring Plate		1
A175	GB818	Pan Head Cap Screw	M8X12	2
A176	GB96	Washer	Ø 8	2
A177	GB6170	Hex. Nut	M8	2
B1	JWBS16SC-B001	Trunnion Support Bracket		1
B2	GB96	Flat Washer	Ø 4	2
B3	JWBS16SC-B003	Angle Pointer		1
B4	GB818	Pan Head Cap Screw	M4X6	2
B5	GB818	Pan Head Cap Screw	M5X8	6
B6	JWBS16SC-B006	Trunnion Block		1
B7	JWBS16SC-B007	Gear Rack		1
B8	GB818	Pan Head Cap Screw	M4X6	1
B9	JWBS16SC-B009	Gear		1
B10	GB96	Flat Washer	Ø 8	7
B11	GB6170	Hex. Locking Nut	M8	2
B12	JWBS16SC-B012	Adjustment Knob Bolt		1
B13	JWBS16SC-B013	Carriage Bolt		2
B14	JWBS16SC-B014	Thick Washer		2
B15	JWBS16SC-B015	locking lever		1
B16	JWBS16SC-B016	Step Screw		1
B17	JWBS16SC-B017	Spring		1
B18	JWBS16SC-B018	Locking Handle		1
B19	JWBS16SC-B019	Saw Blade		1
B20	GB93	Spring Washer	Ø 8	5
B21	GB818	Pan Head Cap Screw	M5X8	2
B22	JWBS16SC-B022	Spring		1
B23	JWBS16SC-B023	Lock Knob		1
B24	JWBS16SC-B024	Adjustment Knob Bolt		1
B25	JWBS16SC-B025	Locking Ring		1
B26	GB96	Large Washer	Ø 6	1
B27	GB6170	Hex. Nut	M6	2
B28	JWBS16SC-B028	Adjustment Plate		1
B29	JWBS16SC-B029	Thrust Bearing Holder		1
B30	JWBS16SC-B030	Retaining Ring	Ø 22	1
B31	GB276	Bearing	608	1
B32	JWBS16SC-B032	Retaining Ring	Ø 8	1
B33	JWBS16SC-B033	Adjustment Shaft		1
B34	JWBS16SC-B034	Adjustment Bar		1
B35	GB80	Socket Set Screw	M6X6	1
B36	JWBS16SC-B036	Lower Blade Guide Support		1
B37	JWBS16SC-B037	Aluminum block		1
B38	GB818	Pan Head Cap Screw	M6X16	1
B39	JWBS16SC-B039	Eccentric Shaft		2
B40	JWBS16SC-B040	Retaining Ring	Ø 15	1
B41	GB276	Bearing	6202	2
B42	JWBS16SC-B042	Spacer		2
B43	JWBS16SC-B043	Knurled Adjusting Knob		2
B44	GB93	Spring Washer	Ø 6	2
B45	GB818	Pan Head Cap Screw	M6X45	2
B46	JWBS16SC-B046	Cone Spring		1
B47	JWBS16SC-B047	Spring		1
B48	JWBS16SC-B048	Lock Knob		1
B49	JWBS16SC-B049	Lock Knob		1
C1	JWBS16SC-C001	Guide Bracket		1

Parts List for JWBS-16SC Band Saw

Index No.	Part No.	Description	Size	Qty
C2	GB96	Flat Washer	Ø 8	2
C3	GB93	Spring Washer	Ø 8	6

C4.....	GB70.1	Socket Head Cap Screw	M8X35	2
C5.....	JWBS16SC-C005.....	Guide Bar		1
C6.....	JWBS16SC-C006.....	Protective Plate		1
C7.....	GB70.2	Socket Head Cap Screw	M8X12	4
C8.....	JWBS16SC-C008.....	Gear box		1
C9.....	JWBS16SC-C009.....	Bush		1
C10.....	JWBS16SC-C010.....	Worm shaft		1
C11.....	JWBS16SC-C011.....	Retaining Ring.....	Ø 8	2
C12.....	JWBS16SC-C012.....	Shaft		1
C13.....	JWBS16SC-C013.....	Retaining Ring.....	Ø 13	2
C14.....	JWBS16SC-C014.....	Gear.....		1
C15.....	JWBS16SC-C015.....	Upper Blade Guide Support		1
C16.....	JWBS16SC-C016.....	Cone Spring		4
C17.....	JWBS16SC-C017.....	Lock Knob		4
C18.....	JWBS16SC-C018.....	Hex. Post.....		1
C19.....	GB80	Socket Set Screw	M6X6	2
C20.....	JWBS16SC-C020.....	Upper Guide Support Block		1
C21.....	JWBS16SC-C021.....	Eccentric Shaft		2
C22.....	GB276	Bearing	6202	4
C23.....	JWBS16SC-C023.....	Spacer		2
C24.....	JWBS16SC-C024.....	Knurled Knob.....		2
C25.....	GB93	Spring Washer.....	Ø 6	2
C26.....	GB70.1	Socket Head Cap Screw	M6X25	2
C27.....	JWBS16SC-C027.....	Thrust Bearing Holder		1
C28.....	JWBS16SC-C028.....	Retaining Ring.....	Ø 22	1
C29.....	GB276	Bearing	608	1
C30.....	JWBS16SC-C030.....	Retaining Ring.....	Ø 8	1
C31.....	JWBS16SC-C031.....	Adjust Shaft		1
C32.....	JWBS16SC-C032.....	Spacing Sleeve		1
D1.....	JWBS16SC-D001.....	Aluminum Fence		1
D2.....	JWBS16SC-D002.....	Fence Body		1
D3.....	JWBS16SC-D003.....	Adjustment Knob		1
D4.....	GB96	Flat Washer	Ø 8	3
D5.....	JWBS16SC-D005.....	Wave Washer.....	Ø 8	1
D6.....	GB6170	Hex. Nut	M8	2
D7.....	JWBS16SC-D007.....	Cone Spring		1
D8.....	JWBS16SC-D008.....	Knob		1
D9.....	JWBS16SC-D009.....	Large Knob.....		1
D10.....	JWBS16SC-D010.....	Nylon Pad.....		1
D11.....	JWBS16SC-D011.....	Fence Guide Rail.....		1
D12.....	GB80	Socket Set Screw	M10X80	2
D13.....	GB41	Hex. Nut	M10	6
D14.....	GB96	Flat Washer	Ø 10	4
D15.....	GB93	Spring Washer.....	Ø 10	2
D16.....	JWBS16SC-D016.....	Lock Block		1
D17.....	JWBS16SC-D017.....	Lock Handle	AM8X10	2
D18.....	JWBS16SC-D018.....	Locate Block		1
D19.....	JWBS16SC-D019.....	Ruler		1
E1.....	JWBS16SC-E001.....	Locking handle		1
E2.....	JWBS16SC-E002.....	Pull knob.....		1


Parts List for JWBS-16SC Band Saw

Index No.	Part No.	Description	Size	Qty
E3.....	JWBS16SC-E003.....	Pointer		1
E4.....	JWBS16SC-E004.....	Angle Ruler.....		1
E5.....	JWBS16SC-E005.....	Flange Bush		1

E6	JWBS16SC-E006	Thin Washer		1
E7	JWBS16SC-E007	Sliding bar		1
E8	JWBS16SC-E008	Special Washer		1
E9	JWBS16SC-E009	Sliding Pin		1
E10	JWBS16SC-E010	Angle scale		1
E11	JWBS16SC-E011	Spring screw	M6X12	1
E12	GB70.3	Flat Head Screw	M6X8	1
E13	GB70.1	Socket Head Cap Screw	M5X12	2
E14	GB93	Spring Washer	Ø 5	2
E15	GB96	Flat Washer	Ø 6	1
E16	GB6170	Hex. Locking Nut	M6	1
E17	GB96	Flat Washer	Ø 6	1
E18	GB818	Pan Head Cap Screw	M6x20	1
	JWBS16SC-ID	ID Label (not shown)		1
	JWBS16SC-ML	Motor Label (not shown)		1
	JWBS16SC-JET	JET LOGO not shown)		1
	JWBS16SC-L	ModelLabel (not shown)		1
	JWBS16SC-WR	Warning Label (not shown)		1

Wiring Diagram for JWBS-16SC Band Saw

JWBS-16SC Band Saw..... ~ 230V, 50Hz

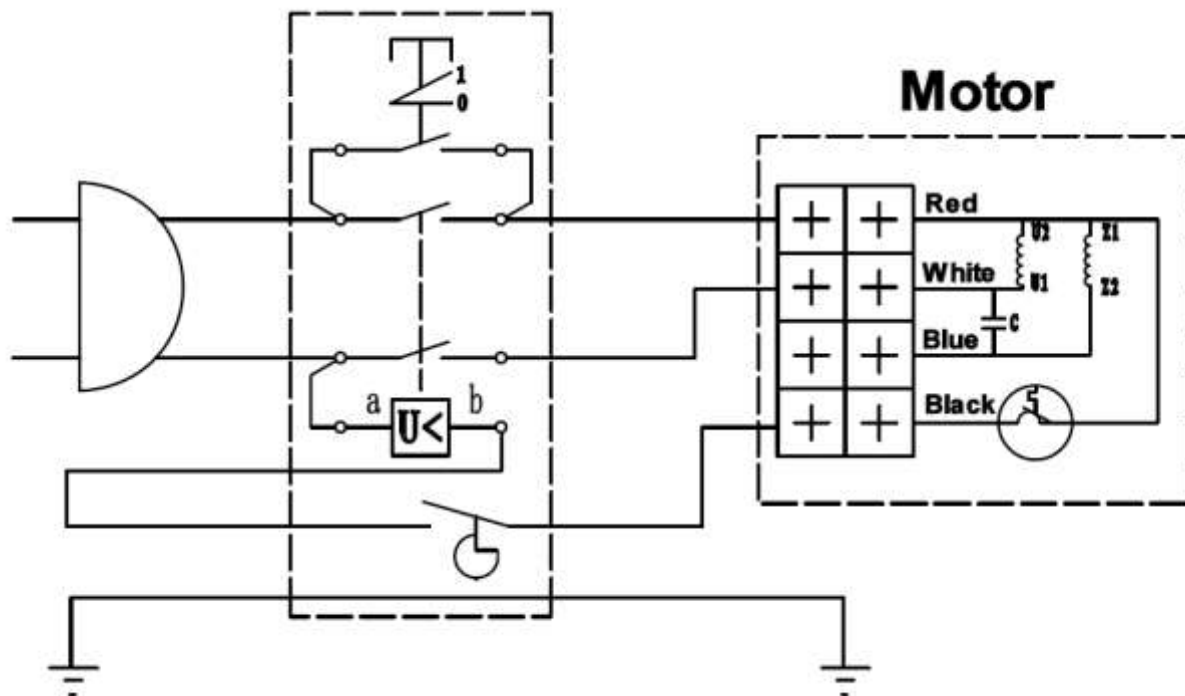

JWBS-16SC Band Saw..... 3~400V, 50Hz

