


JDP-20FT Assembly Breakdown

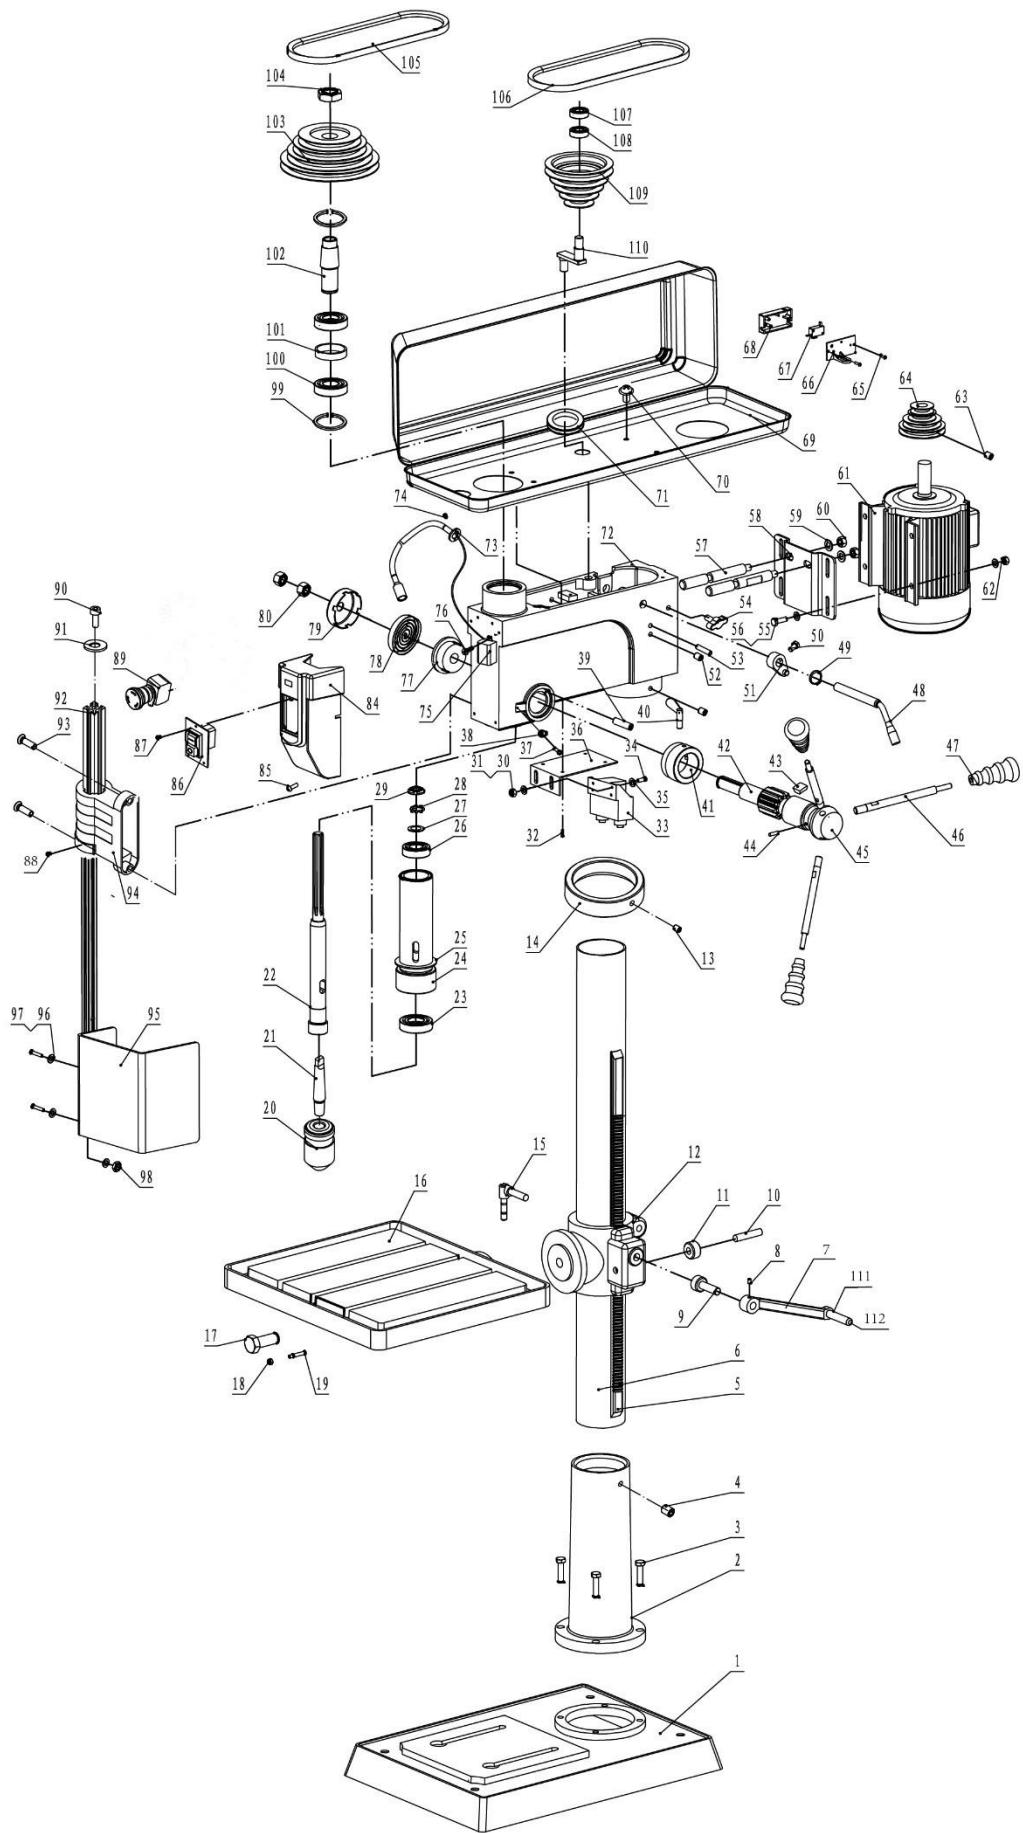

JDP-20FT Parts List for Breakdown (1/3)

Index	Part No.	Description	Size	Qty.
1	JDP20FT-001	Base		1
2	JDP20FT-002	Column Support		1
3	JDP20FT-003	Hex Cap Screw	M12×40	4
4	JDP20FT-004	Socket Set Screw	M10×12	1
5	JDP20FT-005	Rack		1
6	JDP20FT-006	Column		1
7	JDP20FT-007	Crank Arm Shaft		1
8	JDP20FT-008	Socket Set Screw	M6×10	1
9	JDP20FT-009	Worm Shaft		1
10	JDP20FT-010	Gear Pin		1
11	JDP20FT-011	Helical Gear		1
12	JDP20FT-012	Table Support		1
13	JDP20FT-013	Socket Set Screw	M6×10	1
14	JDP20FT-014	Rack Collar		1
15	JDP20FT-015	Lock Handle		1
16	JDP20FT-016	Table		1
17	JDP20FT-017	Hex Cap Screw	M20×50	1
18	JDP20FT-018	Nut	M8	1
19	JDP20FT-019	Pin		1
20	JDP13FT-018	Keyless Chuck		1
21	JDP20FT-021	Arbor		1
22	JDP20FT-022	Spindle		1
23	BB-6207ZZ	Bearing	6207ZZ	1
24	JDP20FT-024	Quill		1
25	JDP20FT-025	Rubber Washer		1
26	BB-6204ZZ	Bearing	6204ZZ	1
27	JDP20FT-027	Washer		1
28	JDP20FT-028	Locking Ring		1
29	JDP20FT-029	Locking Nut	M20	1
30	JDP20FT-030	Nut	M5	2
31	JDP20FT-031	Flat Washer	5	2
32	JDP20FT-032	Cross Pan Head Screw	M4×16	1
33	JDP20FT-033	Laser		1
34	JDP20FT-034	Cross Pan Head Screw	M5×16	1
35	JDP20FT-035	Flat Washer	5	2
36	JDP20FT-036	Connector		1
37	JDP20FT-037	Cross Pan Head Screw	M4×8	1
38	JDP20FT-038	Indicator		1
39	JDP20FT-039	Stop Screw		1
40	JDP20FT-040	Locking Button		1
41	JDP20FT-041	Ring Depth Stop		1
42	JDP20FT-042	Pinion Shaft		1
43	JDP20FT-043	Gib		1
44	JDP20FT-044	Pin	5×16	1
45	JDP20FT-045	Hub		1
46	JDP20FT-046	Handle		3
47	JDP20FT-047	Grip		3
48	JDP20FT-048	Handle Shifter		1
49	JDP20FT-049	C-Clip	15	3
50	JDP20FT-050	Hex Cap Screw	M8×16	3
51	JDP20FT-051	Shift fork		1
52	JDP20FT-052	Hex Socket Cap Screw	M10×12	2
53	JDP20FT-053	Pin	8×25	2
54	JDP20FT-054	Shifter Bolt		2
55	JDP20FT-055	Hex Cap Screw	M8×25	4
56	JDP20FT-056	Washer	8	8

JDP-20FT Parts List for Breakdown (2/2)

Index No.	Part No.	Description	Size	Qty.
57	JDP20FT-057	Motor Rod		2
58	JDP20FT-058	Motor Base		1
59	JDP20FT-059	Lock Washer	12	2
60	JDP20FT-060	Nut	M12	2
61	JDP20FT-061	Motor		1
62	JDP20FT-062	Nut	M8	4
63	JDP20FT-063	Socket Set Screw	M8x12	1
64	JDP20FT-064	Motor Pulley		1
65	JDP20FT-065	Tapping Screw	M3.5x13	2
66	JDP20FT-066	Micro Switch Box Cover		1
67	JDP20FT-067	Micro Switch		1
68	JDP20FT-068	Micro Switch Box		1
69	JDP20FT-069	Pulley Cover Assy		1
70	JDP20FT-070	Pan Head Screw	M6x12	1
71	JDP20FT-071	Strain Relief		1
72	JDP20FT-072	Head		1
73	JDP20FT-073	LED Light		1
74	JDP20FT-074	Screw		4
75	JDP20FT-075	Transformer		1
76	JDP20FT-076	Cross Pan Head Screw	M4x8	1
77	JDP20FT-077	Spring Seat		1
78	JDP20FT-078	Coil Spring		1
79	JDP20FT-079	Spring Cap		1
80	JDP20FT-080	Nut	M12	2
84	JDP20FT-084	Switch Box		1
85	JDP20FT-085	Cross Pan Head Screw	M5x16	2
86	JDP20FT-086	Electromagnetic Switch		1
87	JDP20FT-087	Tapping Screw	M4.2x9	2
88	JDP20FT-088	Shifter Bolt		1
89	JDP20FT-089	Emergency Stop Switch		1
90	JDP20FT-090	Hex Socket Cap Screw	M6x8	1
91	JDP20FT-091	Washer	6	1
92	JDP20FT-092	Chuck Guard Rod		1
93	JDP20FT-093	Cross Pan Head Screw	M5x16	4
94	JDP20FT-094	Chuck Guard Micro Switch Assy		1
95	JDP20FT-095	Chuck Guard		1
96	JDP20FT-096	Washer	5	4
97	JDP20FT-097	Cross Pan Head Screw	M5x25	2
98	JDP20FT-098	Nut	M5	2
99	JDP20FT-099	Retaining Ring		1
100	BB-6203ZZ	Ball Bearing	6203ZZ	2
101	JDP20FT-101	Spacer		1
102	JDP20FT-102	Driving Sleeve		1
103	JDP20FT-103	Spindle Pulley		1
104	JDP20FT-104	Pulley Set nut		1
105	JDP20FT-105	V-Belt	A-29	1
106	JDP20FT-106	V-Belt	A-33	1
107	BB-6202ZZ	Ball Bearing	6202ZZ	2
109	JDP20FT-109	Center Pulley		1
110	JDP20FT-110	Center Pulley Shaft		1
111	JDP20FT-111	Crank Arm Handle Grip		1
112	JDP20FT-112	Crank Arm Handle Shaft		1
.....	JDP20FT-113	Scale Indicator (Not show)		1
.....	JDP20FT-114	Rivet (Not show)	2.5x5	5
.....	JDP20FT-115	Tilt Scale (Not show)		1
.....	JDP20FT-116	Depth Scale (Not show)		1
.....	JDP20FT-117	Rubber sleeve (Not show)		1