


JDP-8BM Assembly Breakdown

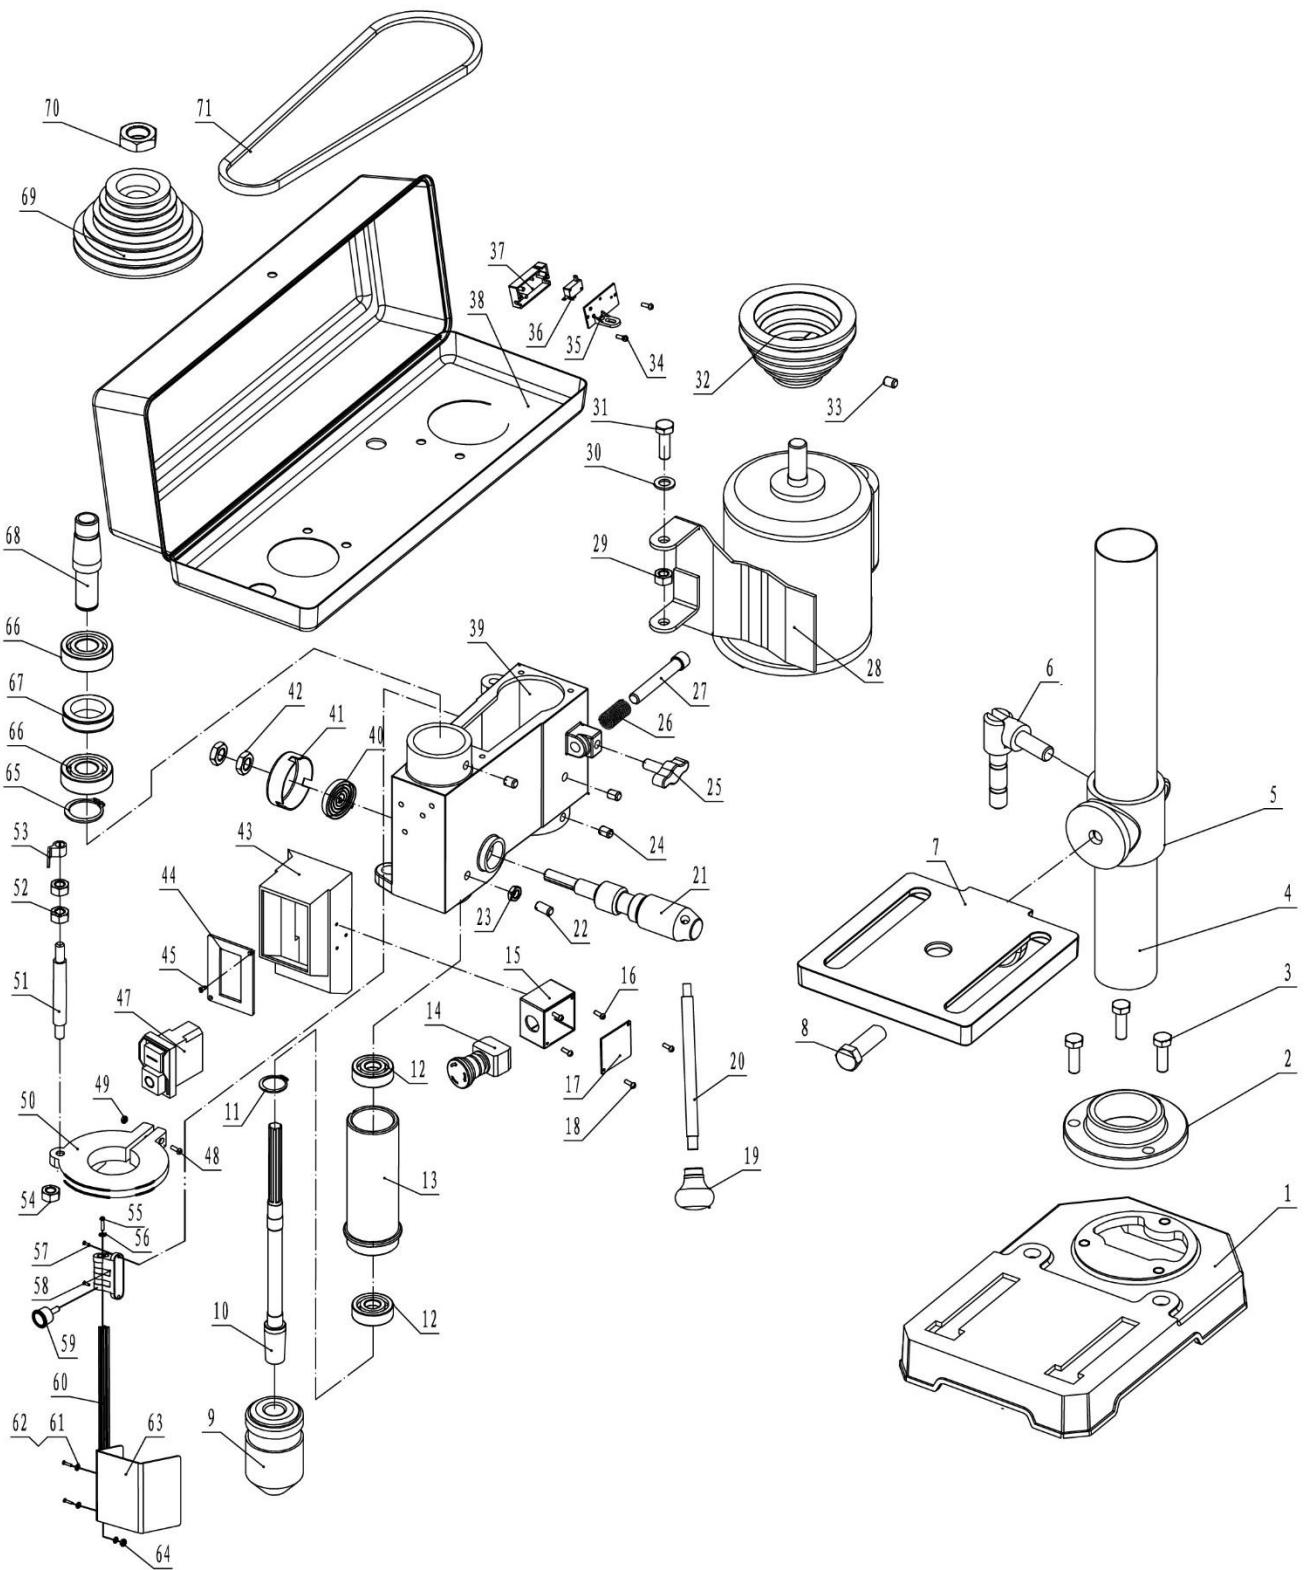

JDP-8BM Parts List for Breakdown (1/2)

Index	Part No.	Description	Size	Qty.
1	JDP8BM-001	Base		1
2	JDP8BM-002	Column support		1
3	JDP8BM-003	Hex Cap Screw.....	M8×20.....	3
4	JDP8BM-004	Column		1
5	JDP8BM-005	Support		1
6	JDP8BM-006	Lock handle		1
7	JDP8BM-007	Table		1
8	JDP8BM-008	Hex Cap Screw.....		1
9	JDP8BM-009	Chuck.....		1
10	JDP8BM-010	Spindle		1
11	JDP8BM-011	C-Clip	11	1
12	BB-6201ZZ	Ball Bearing	6201ZZ.....	2
13	JDP8BM-013	Quill		1
14	JDP8BM-014	Emergency Stop Switch		1
15	JDP8BM-015	Emergency Stop Switch Box		1
16	JDP8BM-016	Cross Pan Head Screw.....	M4×12.....	3
17	JDP8BM-017	E-Stop Switch Box Cover		1
18	JDP8BM-018	Tapping Screw	M3.5×9	2
19	JDP8BM-019	Grip		3
20	JDP8BM-020	Handle		3
21	JDP8BM-021	Handle Seat		1
22	JDP8BM-022	Screw.....		1
23	JDP8BM-023	Nut	M8	1
24	JDP8BM-024	Hex Socket Cap Screw	M8×8	3
25	JDP8BM-025	Locking Button		1
26	JDP8BM-026	support spring		1
27	JDP8BM-027	Tightening Pin		1
28	JDP8BM-028	Motor		1
29	JDP8BM-029	Nut-Lock	M8	2
30	JDP8BM-030	Washer	8	4
31	JDP8BM-031	Screw-Hex	M8×25	2
32	JDP8BM-032	Motor Pulley		1
33	JDP8BM-033	Hex Socket Cap Screw	M6×10	1
34	JDP8BM-034	Tapping Screw	M3.5×13	2
35	JDP8BM-035	Micro Switch Box Cover		1
36	JDP8BM-036	Micro Switch		1
37	JDP8BM-037	Micro Switch Box		1
38	JDP8BM-038	Pulley Cover Assy		1
39	JDP8BM-039	Head		1
40	JDP8BM-040	Coil Spring		1
41	JDP8BM-041	Spring Cap		1
42	JDP8BM-042	Nut	3/8" 24TPI	2
43	JDP8BM-043	Switch Box		1
44	JDP8BM-044	Switch Plate		1
45	JDP8BM-045	Cross Pan Head Screw	M5×12	4
47	JDP8BM-047	Electromagnetic Switch		1
48	JDP8BM-048	Cross Pan Head Screw	M6×25	1
49	JDP8BM-049	Nut	M6	1
50	JDP8BM-050	Set Ring		1
51	JDP8BM-051	Scale Bolt		1
52	JDP8BM-052	Nut	M10	2
53	JDP8BM-053	Pointer		1
54	JDP8BM-054	Nut	M6	1
55	JDP8BM-055	Hex Socket Cap Screw	M6×8	1
56	JDP8BM-056	Washer	6	1
57	JDP8BM-057	Cross Pan Head Screw	M5×16	2
58	JDP8BM-058	Chuck Guard Micro Switch Assy		1

JDP-8BM Parts List for Breakdown (2/2)

Index No.	Part No.	Description	Size	Qty.
59	JDP8BM-059	Shifter Bolt		2
60	JDP8BM-060	Chuck Guard Rod		1
61	JDP8BM-061	Cross Pan Head Screw	M5×40	3
62	JDP8BM-062	Washer	5	4
63	JDP8BM-063	Chuck Guard		1
64	JDP8BM-064	Nut	M5	1
65	JDP8BM-065	C-Clip	17	1
66	BB-6203ZZ	Bearing	6203ZZ	2
67	JDP8BM-067	Spacer		1
68	JDP8BM-068	Driving Sleeve		1
69	JDP8BM-069	Spindle Pulley		1
70	JDP8BM-070	Pulley Set nut		1
71	JDP8BM-071	V-Belt		1
	JDP8BM-072	Tilt Scale (Not show)		1
	JDP8BM-073	Depth Scale (Not show)		1
	JDP8BM-074	Rivet (Not show)	2.5×5	2
	JDP8BM-075	Rubber sleeve (Not show)		1